♥YAMAHA MOX6/MOX8 Editor VST Owner's Manual

Contents

What is the MOX6/MOX8 Editor VST?	2
Data Structure of the MOX6/MOX8 Editor VST	3
Starting the MOX6/MOX8 Editor VST	4
An Example of MOX6/MOX8 Editor VST in Use	7
MOX6/MOX8 Editor VST Window	13
Basic Operations	33
Menu	35
Tips	51
Recording to Cubase MIDI tracks with the MOX6/MOX8 Editor VST	
Recording/Editing Arpeggio playback as MIDI data on Cubase	
Troubleshooting	57

- Copying of the commercially available music sequence data and/or digital audio files is strictly prohibited except for your personal use.
- The software and this owner's manual are exclusive copyrights of Yamaha Corporation.
- Copying of the software or reproduction of this manual in whole or in part by any means is expressly forbidden without the written consent of the manufacturer.
- Yamaha makes no representations or warranties with regard to the use of the software and documentation and cannot be held responsible for the results of the use of this manual and the software.
- The screen displays as illustrated in this Owner's Manual are for instructional purposes, and may appear somewhat different from the screens which appear on your computer.
- Windows is the registered trademarks of Microsoft[®] Corporation.
- Apple, Mac and Macintosh are trademarks of Apple Inc., registered in the U.S. and other countries.
- Steinberg and Cubase are the registered trademarks of Steinberg Media Technologies GmbH.
- The company names and product names in this Owner's Manual are the trademarks or registered trademarks of their respective companies.
- Click on the blue-colored text to jump to the related item in this manual.

This owner's manual assumes that you are already familiar with basic Windows/Mac operations. If you are not, please refer to the owner's manual which came with your Windows/Mac software before using the MOX6/MOX8 Editor VST.

For information about hardware requirements, the interconnection of devices and the installation of the MOX6/MOX8 Editor VST software, refer to the separate Installation Manual as well as the Owner's Manual for the respective MIDI device.

© 2011 Yamaha Corporation. All rights reserved.

What is the MOX6/MOX8 Editor VST?

MOX6/MOX8 Editor VST is a convenient tool which lets you edit and save the various parameters of your MOX6/MOX8 tone generator. These include Voice and Mixing parameters (edited in the Voice or Mixing mode of the MOX6/MOX8) such as Volume, Pan, EG, and Cutoff and other settings. Thanks to its easy-to-understand graphical interface, you can edit various parameters of the MOX6/MOX8 right from your computer — using the mouse to adjust the virtual knobs, sliders, and buttons and entering values from the computer keyboard. Finally, all the changes you have made can be saved to your computer or transmitted to the MOX6/MOX8 instrument.

The MOX6/MOX8 Editor VST, based on the "VST3 technology" by Steinberg, works as a VST3 plug-in with the Cubase series (version 5.5 or later Cubase 5/Cubase Studio 5, and version 5.1.1 or later Cubase Essential 5/Cubase AI 5). The MOX6/MOX8 Editor VST also works as the same way as other VST instrument software, allowing you to save the edited settings of the MOX6/MOX8, or use them for another project. In addition, you can handle the MOX6/MOX8 Voices in the Media Bay window in Cubase series when using the MOX6/MOX8 Editor VST with Cubase series, allowing you to search for, listen, and load the MOX6/MOX8 Voices within Media Bay in Cubase series. The MOX6/MOX8 Editor VST provides a comprehensive and seamless music production environment — making the use of hardware and software both easier and much more efficient.

The MOX6/MOX8 Editor VST lets you adjust the hue as desired (page 6). This manual uses example screen shots having the most universal color visibility, allowing the manual to be easily viewed by many people having different types of color recognition.

Default



Adjusted to universal hue

BarMuth Lo Lo H Ma H-H H China	Finisht	Nurter Effect	Table .	•
	 REVOCING 	and the local designment of the		Part Common
ert B. E. Caterory East No. Yoka Name	ED LA CHI CH	Die Fill Die Rev Pari	Volume Byn Dannel USE Dubynk ARP	Con e Conversal
1 1 1 Pm 1 PH1 1 BE1 1 Ful Consert Bran	0.0d	=000	* 121 1 = 1 = 1 = 1 = 1 = 1 = 1	a Abit
2 DE LINE DELENSIONE DE	000	0 - 000	A DESIGNATION AND A DESIGNATIONA AND A DESIGNATION AND A DESIGNATI	
2 CONTRACTOR STATE	 (0,0),0	-000	A REAL PROPERTY CONTRACTOR COMP.	
4 CONTRACTOR CONTRACTOR	000	= 000		Demont
8	0.00	-000-	* INC	N Date + Oscillator (P)
6 The The Shitt Shitt Shitt Shall Concert Grant	(b)d	-000-	*	I LAN TRACTOR
T	000	000-		N SINC Courts
B The Tree This 2001 174 Covert Gran	000	-000		· DE Anettula
B D D D Part of Part 2 Del 1 D val Consert Grant	000	0-000-		E EBEE Level(Par
10 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	000	0 - 000		* ENEC
11 The Street Street State Street Street	000	- 020-		· Enter +LFOIER
12 III III IIII IIII IIII IIII IIII III	0.000	- 000-		- 10C
12	0.000	-000		THE C
14 DI TRANSFER DELL'AND DEL CONNET DELL		-090-		
12 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		-000		
16 C Cham I Fel 1001 I Ind Convert Gran		000	A 144 14 14 14 14 14 14 14 1	
Part 1-16 Part Part	- XAXAX			

Data Structure of the MOX6/MOX8 Editor VST

The MOX6/MOX8 Editor VST lets you create the following data and save them as a single file (extension: X4E).

- Current Global data (latest status of edited global parameters)
- Current data in the Voice mode (latest status of edited Voice)
- Current data in the Song/Pattern mode (consisting of Mixing setup, latest status of edited Voice and 16 Mixing Voices)
- User Voice data (consisting of three Normal Voice Banks and one Drum Voice Bank)

Current settings includes the latest settings of the Common and Element parameters for the Voice last assigned to each of Parts 1 – 16, as well as Mixing parameter settings such as Voice assignment, pan, volume and effect for each Part. Among the Voice Banks, only the Mixing Voice Bank data belongs to the Current settings. The MOX6/ MOX8 Editor VST lets you edit parameters (including Element parameters) of the Voice assigned to each Part and save the latest edit status as a file without storing it as a User Voice or a Mixing Voice. This means that you can easily recall the latest status of the previous edit simply by opening the file.

The MOX6/MOX8 Editor VST handles the Global data which includes some of the parameters shown on the "G" row in the Mixer section and all the parameters in the Global Settings of the Parameter Category section (pages 19 and 27).

The diagram illustrated below indicates the structure of the data created via the MOX6/MOX8 Editor VST, the structure of the data stored in the internal memory of the MOX6/MOX8 instrument and the relationship between those two types of data.



- *1 When the MOX6/MOX8 instrument is connected to the computer properly with the ONLINE status, editing a parameter on the MOX6/MOX8 Editor VST affects the same parameter on the MOX6/ MOX8 itself, and vice versa.
- *2 The Store Voice operation on the Editor will store the Voice data to the memory of the MOX6/MOX8 instrument as well as the memory of the Editor.

*3 The Store Global operation and Store Mixing operation will store the data only to the memory of the MOX6/MOX8 instrument.

Starting the MOX6/MOX8 Editor VST

Install the Yamaha Steinberg USB Driver and MOX6/MOX8 Editor VST by following the respective Installation Guides. After making the required connection and setting the MIDI IN/OUT parameter to "USB" in the Utility mode, follow the instructions below to start the MOX6/MOX8 Editor VST.

This example describes the operation steps for Cubase with the MOX6/MOX8 instrument connected to a computer via an USB cable.

- For details about connection between the MOX6/MOX8 and a computer, refer to the Owner's Manual of the MOX6/MOX8.
- On the MOX6/MOX8, press the [UTILITY] to enter the Utility mode, then press the [F6] MIDI followed by the [SF4] OTHER. On this display, set the MIDI In/Out parameter to "USB", then press the [STORE] button to store this Utility setting.
 - 1. Open the VST Instrument window via [Devices] → [VST Instruments] in the Cubase series menu.



2. Click the Instrument Slot in the VST Instrument Rack, then select [External] \rightarrow [MOX6/ MOX8 VST].



3. When the dialog box asking "Do you want to create a MIDI track assigned to plug-in "MOX6/MOX8 VST"?" appears, click [Create].



A MIDI track will be created and the MOX6/MOX8 Editor VST window will appear.

4. Click the Output Setup button at the right side of the Edit button ((2)) in the VST Instrument Rack, then select [Activate All Outputs].



After this operation, the MOX6/MOX8 1 - 2 Busses appear in the project window of the Cubase series.

- 5. Call up the Editor Setup window in the MOX6/MOX8 Editor VST via [File] → [Editor Setup].
- **6.** Select "MOX6/MOX8" at the [USB Device] column.

Data Port		
		Device No.
USB		1
Detail Off	USB Device	
	MOX67MOX8	

- 7. Click [OK] button at the bottom.
- 8. Call up the VSTi Setup window in the MOX6/MOX8 Editor VST via [File] \rightarrow [VSTi Setup].
- 9. Click the [Auto] button then all the audio ports are assigned automatically.
- **10.** Click the [OK] button at the bottom.
- 11. If the MOX6/MOX8 Editor VST is "OFFLINE," click the [ONLINE/OFFLINE] button to go "ONLINE."
- **12.** In Quick Setup, select the desired one.



- Step 5 through 10 are required when starting MOX6/MOX8 Editor VST for the first time. These steps are saved in the editor and do not need to be repeated each time it is started.
- The MOX6/MOX8 Editor can be started also from Media Bay via the following steps. From the "Media" menu of Cubase series, select "MediaBay" to call up the MediaBay window. Select a Voice from the MediaBay, right-click to call up "Property," then select "Create Track." Press the "Edit Instrument" button on the created Instrument track to start the MOX6/MOX8 Editor VST.

Adjusting the hue of the display

The MOX6/MOX8 Editor VST lets you adjust the hue as desired.

1. At the left bottom of the Editor window, click the triangle button to call up the slider. Click the triangle button again to close the slider.



2. Drag or click the slider to adjust the hue.



In Windows, to reset the hue to its default, simultaneously hold down the <Ctrl> key and click on the slider.

On the Mac, to reset the hue to its default, simultaneously hold down the <Command> key and click on the slider.

For details about slider operation, refer to page 34.

An Example of MOX6/MOX8 Editor VST in Use

There is no single way to use the many components in the MOX6/MOX8 Editor VST. Your editing needs and preferences may differ; however, the following example gives you a simple step-by-step guide in how to use the MOX6/MOX8 Editor VST. As an example, this section explains how to edit a Voice in the Voice mode, edit a Mixing program in the Song mode, then store the edited data to the memory of the MOX6/MOX8 instrument and save the final results of your editing to a file.

Editing in the Voice mode

DIVIT If the [Song] or [Pattern] indication (at the top left of the display) is on, perform the instructions below from step 1. If the [Voice] indication is on, perform the instructions below from step 2.

1. Change the mode to the Voice mode by clicking the [Voice] indication (at the top left of the display).

If the [ONLINE]/[OFFLINE] indication is set to [ONLINE] before changing the mode, the Auto Sync window will be called up automatically when this step is executed. As step 2 is thus unnecessary, you should proceed to step 3.

- Click the [OFFLINE] to call up the Auto Sync window if the [ONLINE]/[OFFLINE] indication is set to [OFFLINE].
- 3. On the Auto Sync window, set communication-related parameters such as Input Port, Output Port and Device Number in the Data Port section, then set the direction of Data Auto Synchronization (Global, Current and Voice) in the Auto Sync Setting section. When you want to use the settings on the MOX6/MOX8 itself as starting data for editing, set the boxes of Global, Current and Voice in the Auto Sync Setting to on so that the data flows from the instrument to the computer. To use the settings on the MOX6/MOX8 Editor VST as starting data, set both Global, Current and Voice to the opposite, so that the arrow indicates data flow from the computer to the keyboard. For details, see page 37.

×	Auto Sync						
		Data Port				Device No.	
		USB	l Off	USB Device		1 \$	
		Auto Sync Set	tting	MOX6/MOX8	\$		
		Global	On		PC > MOX67MOX8	Auto Start	
		Current Voice	On		PC > M0X67M0X8 M0X67M0X8 > PC	On	
				Start			

NOTICE

- Keep in mind that when you set Global, Current and Voice to On, enable data sync from the computer to the MOX6/ MOX8 (instrument), and then click the [Start] button at the bottom, this operation transmits these types of data currently on the Editor to the MOX6/MOX8 itself, automatically overwriting and erasing all the corresponding data already existing on memory of the MOX6/MOX8 instrument. When you want to use the settings on the MOX6/MOX8 itself as starting data for editing, set the boxes of Global, Current and Voice in the Auto Sync Setting to on so that the data flows from the instrument to the computer.
- · Make sure to set the desired data transfer direction in order to avoid data loss.
- · Any data which was overwritten and lost accidentally cannot be recovered.

4. From the Auto Sync window, click [Start] at the bottom.

The data synchronization will be started if the Port settings are correct. As soon as data synchronization is completed, the Auto Sync window is closed, then the OFFLINE indication is changed to ONLINE indication automatically. In this ONLINE status, editing a parameter on the MOX6/MOX8 Editor VST affects the same parameter on the MOX6/MOX8 itself, and vice versa.



For more information, refer to "ONLINE/OFFLINE" on page 13.

5. Edit the Voice in the Voice mode.

5-1 On the "V" row of the Voice section, click the Bank name or Voice name to call up the VOICE LIBRARY window.



5-2 From the list in the VOICE LIBRARY, select the desired Voice to assign it temporarily to the current Part.

You can confirm the sound of the selected Voice by clicking any note on the virtual keyboard or the MOX6/MOX8 keyboard.

5-3 Click the Voice name or [OK] at bottom right of the window to close the VOICE LIBRARY window.

You can cancel the Voice selection by clicking the Close (X) button or [Cancel] button at bottom right of the window. By executing this operation, the Voice selection is reset to the original status and the VOICE LIBRARY window closes.

NOTICE

When a different Voice has been selected, your edits of the previously selected Voice will be lost. If you want to store the edits, make sure to store the Voice by using the Store window (page 46) before changing the Voice.

5-4 Edit the Voice parameters as desired.

Edit the parameters (EQ, chorus, reverb, etc.) in the "V" row by clicking them.



To confirm how the parameter edit affects the Voice sound, click any note on the virtual keyboard or the MOX6/MOX8 keyboard.



To make detailed settings of the selected Voice, click the arrow button **I** at the top of the right panel next to the main window to call up the Detailed Parameter section.

() R U 🔊 🔷 🔷			
File Edit Bulk Help	_	⊛ YA	MAHA moxs/moxs
Voice Cate:Voice Name Cate:Voice Name Cate:Voice Name	Voice Common	GENERAL Volee Name: Full Concert Grand Category Category Acoustic Plano Category Acoustic Plano	Mono/Poly KeyAssign Poly € nutt € MicroTumo Nane Root Pret € Equal
V >Pn :FullConcert(199	ARP Control Set LF0 Effect	Pitch Pitch Bend Note Shift +9 Lower Usper -2seni +2seni	Switch Time Mode Time Legato Slope
Voice AD Part	Element B Control Co	HimpHtLister EG Attack Decay Sustain Release +0 +0 +0 +0 Hitzer Attack Decay Sustain Release Attack Decay +0 +0 +0 Hitzer Attack Decay 10 10 Attack Decay +0 -0 +0 Outoff Resonance Desth 10	Part: E0 10 10 10 10 10 10 10 10 10 1
	2 1 +8 1 +8 1 +8	Portamento • BO EGO Lovid®) ED Mid FUt2) ED Mid	d9) E0 Heph d8) APP → MDD 0.38 0 +0.00 1 2 3 4 5 6 6

For details about Voice parameters, refer to "Editing a Normal Voice" and "Editing a Drum Voice" in the Reference Manual.

- **6.** Store the edited settings as a User Voice, as necessary.
 - 6-1 Click [Store Voice] under [Edit] in the menu bar to open the Store window (page 46).

6-2 Select a Voice Bank from the following list:

- Normal User 1
- Normal User 2
- Normal User 3
- Drum User

6-3 Open the selected Bank, select the desired number as destination, then enter the name of the Voice in the box at the top of this window.

Normal User 1 – 3 are shown in the Store window when editing the Normal Voice while Drum User is shown in the Store window when editing the Drum Voice.

6-4 Click [Store] to store the edited Voice to the selected number in the selected Bank.

Performing this operation will store the Voice data to the User Voice Bank in the MOX6/MOX8 instrument as well as that within the Editor.

NOTICE

When you execute the Store operation, the settings for the destination memory (of both the Editor and instrument) will be overwritten. Select the destination Voice number carefully to prevent important data from being erased accidentally. For this reason, important data should always be saved to a separate USB storage device.

<	Voice Name Full Concert Grand	Store			
± =	Bank/Name		Category	Sub	
_	Normal User 1				
	Full Concert Grand	1 (A-01)	Acoustic Piano	Acoustic	
	Rock Grand Piano	2 (A-02)	Acoustic Piano	Modern	
	Mellow Grand Piano	3 (A-03)	Acoustic Piano	Acoustic	
	Glasgow	4 (A-04)	Acoustic Piano	Acoustic	
	Romantic Piano	5 (A-05)	Acoustic Piano	Acoustic	
	Assressive Grand	6 (A-06)	Acoustic Piano	Modern	
	Таску	7 (A-07)	Acoustic Piano	Modern	
	House Piano	8 (A-08)	Acoustic Piano	Modern	
	Old and Squashed	9 (A-09)	Acoustic Piano	Vintage	
	Ballad Key	10 (A-10)	Acoustic Piano	Layer	
	80s Layer	11 (A-11)	Acoustic Piano	Layer	
	Ballad Stack	12 (A-12)	Acoustic Piano	Layer	
	Piano Back	13 (A-13)	Acoustic Piano	Layer	
	Piano & Strings	14 (A-14)	Acoustic Piano	Layer	

You can store the settings of the parameters in the "G" row except for the Chorus and Reverb settings by clicking [Store Global] under [Edit] in the menu bar.

Mixing edit in the Song or Pattern mode

This section explains how to edit a Mixing program in the Song mode.

1. Change the mode to the Song mode by clicking [Song] of the [Voice]/[Song]/[Pattern] indication.

The Auto Sync appears automatically during ONLINE status.

2. From the Auto Sync window, click [Start] at the bottom.

Data synchronization will be started if the Port settings are correct. As soon as data synchronization is completed, the Auto Sync window is closed.



3. Edit the parameters of the Mixing and Voice assigned to each Part.

If you want to change the parameter values from the original ones of the selected Song or Pattern, click (drag and drop) each of the parameters such as EQ and effect lined up to the right of "G" in the Global/ Multi section and "1" – "16" in the Part section.

Part	M S	Category	Bank No.	Voice Name	EQ Lo	Mi	Hi Ins.F	X Cho Re	v Pan	Volume	Rev C	hannel USB Output	ARP
1		≻Pn	> PR1 > 00	01 ≻ Full Concert Grand	•	())	9 -	$\phi \varphi$			100 1	🗘 USB 3 & 4 🗘	
2		≻Pn	> PR1 > 00)1 ≻ Full Concert Grand		\bigcirc					100 2	🗘 USB 3 & 4 🗘	
з		≻Pn	> PR1 > 00	01 ≻ Full Concert Grand	(†)	(-)() (100 3	🗘 USB 3 & 4 🗘	-
4		≻Pn	> PR1 > 00	31 ≻ Full Concert Grand	(†)	(-)() –	00)()		100 4	🗘 USB 3 & 4 🗘	

To confirm how the parameter edit affects the Voice sound, click any note on the virtual keyboard.



To make detailed settings of the selected Multi, click the arrow button **1** at the top of the right panel next to the main window to call up the Detailed Parameter section.

The MOX6/MOX8 Editor VST lets you edit the Voice parameters in the Song or Pattern mode as well as Voice mode. In the Voice mode, you can edit only the selected Voice. In the Song or Pattern mode, on the other hand, you can edit the parameters of the Voice assigned to each Part as well as the Mixing parameters. The edited Voice can be stored to the same Voice Bank as a User Voice regardless of the mode used for editing.

🔘 R W o	Ø			
File Edit Bulk Help		~	⊛ YA	MAHA mo%s/mo%e
🔹 Voice 📃 Song 🗈 Pattern 💶 ONLIN			■GENERAL	V M 6 F
Global/Multi	Volume		Voice Name: Full Concert Grand Category Sub Category	Rov Channel Mono/Poly Key Assign ParmwithVoice
6	6 127 P	art Common	Acoustic Plano 🗢 Acoustic 💠	1 poly multi Micro Tuning Name Root
Part M S Cate:Voice Name Pan	Volume	General		Pre1 🗢 — Equal
1 Pn :Full Concert (b 121	ARP RCV/Control Set	Pitch Pitch Bend Note Shift Detune(Hz)	Portamento Switch Time Mode Time Legato Slope
2 ■ ■ > Pn : Full Concert (100	= LFO	+0 +0.0	rate1 🗢 🧄 64 🏠 Ø
3 🔳 ■ > Pn : Full Concert (à 100		Lower Upper	Mode
4 🔳 ■ > Pn : Full Concert (lement	Note/VelocityLimit	Part EQ
5 🔲 🖿 > Pn : Full Concert (- 108	Oscillator / Pitch Filter	Velocity Sense Note Limit	+20
6 ■ ■ >Pn :Full Concert (a 100	2 Type/FEG	-8 -8 -2 6 8	
7 🔳 ■ >Pn :Full Concert (100	Scale	Velocity Linit	-10
8 🔲 📕 > Pn : Full Concert (o 100	Amplitude Level/Pan/AEG	Depth Offset Lower Upper 64 64 1 127	20 100 1k 10k 20k
9 🔲 ■ >Pn :Full Concert (■ 100	Scale	Amplitude EG	Freq. 62.5 428.4 7.40k
10 🔲 🗖 > Pn : Full Concert (🔶	• 108	= LF0/EQ	Attack Decay Sustain Release	
11 🔲 📕 > Pn : Full Concert (0 100			.Gain +0.00 +7.13 +8.00
12 🔳 🔳 > Pn : Full Concert (100		Filter	
13 🔳 📕 > Pn : Full Concert (FII	Attack Decay Sustain Release	* • • • • • • •
14 🔲 📕 > Pn : Full Concert (Output
15 🔳 🔳 > Pn : Full Concert (🔶	1 00		Cutoff Resonance Depth	USB Output VoiceElmPan
16 🔲 📕 > Pn : Full Concert (b 100			Volume Dry Level Cho Send Rev Send
	D Part			
Part MU AS1 AS2 RB AF1	TONE 2	Cutoff Resonance FEG Depth F	Portamento EQ EQ Low(dB) EQ Mid F(Hz) EQ Mid(c 64 EFFECT +0.00 428.4 +1	IB) EQ High(dB) ARP MIDI 7.13+9.00 1 2 3 4 5 6
	irect Monitor			
	Part A.Func			
USB I/O Mode VST 🗘 L	ocal Ctrl 🔲 2 🚃			

4. Store the edited Voice or a Mixing, as necessary.

- 4-1 Select the [Mixing Store] under [Edit] in the menu bar then store the edited Mixing.
- 4-2 Select the Part to which the desired Voice is assigned, select [Store Voice] under [Edit] in the menu bar to call up the Store window (page 46) then store the Voice via the same operations as in steps 6-1, 6-2, 6-3 and 6-4.
- 5. Select [Save] or [Save As] under [File] on the menu bar to save the edited data as a file (extension: *.X4E).

All the settings you made and the Voice data you stored to the User Banks will be saved as a single file (extension: X4E). When you open this file next time to call up the Auto Sync window, click [Start] to synchronize the status of the parameter settings between the MOX6/MOX8 Editor VST and the MOX6/ MOX8 instrument.

The Save operation from the Cubase series File menu will save the Project file including the settings made via the MOX6/MOX8 Voice Editor VST. This means that opening the same Project file next time will call up the settings lastly made via the MOX6/MOX8 Voice Editor VST.

NOTICE

It is recommended that Auto Save be set to off in the Preferences - General window of Cubase series. If Auto Save is set to on, a backup of the Cubase series Project file will be created automatically, resulting in the Indicators showing the Editing Status being turned off, even though the Voice Edit settings have not been saved yet. This allows you to open a new file or different file, resulting in the settings being lost. In other words, to best avoid losing your editing data, set Auto Save to off.

MOX6/MOX8 Editor VST Window

Overall section



1 VST Preset

This box lets you store the settings made on the MOX6/MOX8 Editor VST as VST Preset or recall it. Click the icon () at right of this box, select "Save Preset," enter the desired name of the new VST Preset on the "Save Preset" window then store the settings. The currently edited Voice will be stored in the Voice mode while the edited Mixing setup will to be stored in the Song or Pattern mode. The stored settings can be recalled by clicking the icon () at right of this box, selecting "Load Preset" then selecting the VST Preset. The name of the selected VST Preset will be shown in this box. No name is shown in this box if no Preset VST is recalled.

DIVITE The data of the MOX6/MOX8 stored as VST Preset can be handled like the other VST Presets in the Media Bay of Cubase series 5.1.1 or later.

NOTICE

Note that recalling the VST Preset will overwrite or erase the current settings of the MOX6/MOX8 Editor VST.

2 File, Edit, Bulk, Help

Refer to page 35.

Voice/Song/Pattern mode

Determines the mode of the MOX6/MOX8, Voice, Song or Pattern. As soon as "Voice," "Song" or "Pattern" is selected here, the mode of the MOX6/MOX8 instrument changes accordingly and the Auto Sync window (page 50) opens. After setting parameters as necessary on this window, click [Start] to execute data synchronization between the MOX6/MOX8 Editor VST and the MOX6/MOX8 instrument.

4 ONLINE/OFFLINE

Clicking this switches the status of the Editor between "ONLINE" and "OFFLINE." When "ONLINE" is indicated, the edited status is completely synchronized between the MOX6/MOX8 Editor VST and the MOX6/MOX8 instrument, meaning that any parameter edit you make on the MOX6/MOX8 Editor VST is reflected in the same parameter on the MOX6/MOX8 instrument and vice versa. When OFFLINE is selected, editing on the MOX6/MOX8 Editor VST will not affect the MOX6/MOX8 instrument and vice versa even if the MOX6/MOX8 instrument is connected to a computer.

Note that the indication here is automatically changed according to the status of communication between the MOX6/MOX8 Editor VST and the MOX6/MOX8 instrument. For example, the ONLINE status changes automatically to OFFLINE when the cable is disconnected accidentally.

1 ONLINE

Indicates that the current status is set to ONLINE. Clicking this calls up OFFLINE (2) described below. Keep in mind that the ONLINE indication cannot be enabled when the MIDI Port is not set properly or the MOX6/MOX8 instrument is not properly connected to a computer.

This OFFLINE indication shows that the MIDI Port is set properly and the MOX6/MOX8 is properly connected to a computer. Clicking this calls up the Auto Sync window. From the Auto Sync window, you can synchronize the settings between the MOX6/MOX8 Editor VST and the MOX6/MOX8 by clicking the [Start] button. As soon as data synchronization is completed, the Auto Sync window is closed and the status of the Editor changes from OFFLINE to ONLINE.

When the Global, Current and Voice settings are set to "Off" and Auto Start is set to "On" in the Auto Sync window, clicking here changes the Editor status from OFFLINE to ONLINE without opening the Auto Sync window.

3 ■ OFFLINE

This OFFLINE indication shows that the MIDI Port is not set properly or the MOX6/MOX8 instrument is not connected to a computer properly. Clicking this calls up the Auto Sync window. After making sure to connect the MOX6/MOX8 instrument to a computer, set the MIDI Port properly then click the [Start] button in the Auto Sync window to execute data synchronization between the MOX6/MOX8 Editor VST and the MOX6/MOX8. As soon as data synchronization is completed, the Auto Sync window is closed and the status of the Editor is changed from OFFLINE to ONLINE.

When the Voice/Song/Pattern is set to "Voice"

Mixer section



Global

This strip lets you edit the main parameters in the Voice mode, such as effect-related ones.



"G" box until you save the edited data as a file. This indication is the same as the [F] indicator (page 22).



Lo, Lo-M, Mid, Hi-M, Hi (Master EQ)

Edits the Master EQ parameters.

Chorus

Selects the Chorus type.

Reverb

Selects the Reverb type.

Master Effect

Turns the Master Effect on or off and selects the Master Effect type.

Volume

Adjust the entire volume.

[Voice]/[AD Part] tab

Selects the Parts to be edited from [Voice] and [AD Part]. The illustration below indicates that the [Voice] tab is active.

Voice AD Part

Over the second seco

When the [Voice] is selected:

Edits the Voice parameters. Clicking the "V" row turns this section on as illustrated below.

Voice	Category Bank No. Voice Name	EQ Lo Mi Hi	Cho Rev Pan Volume	ARP
V	>Pn >PR1 >001 >Full Concert Grand	$\square \oplus \oplus \oplus$		_

When editing any of the Voice parameters described below, a small square appears at the top right of the "V" box until you save the edited data as a file or you store the edited data as a Voice. This indication is the same as the [V] indicator (page 29).



The MIDI monitor mark is at the left side of the "V" mark. A small LED lights when the specific MIDI channel receives MIDI messages.



Category, Bank, No., Voice Name

Indicates the Category Bank and name of the Voice. When clicking here, the VOICE LIBRARY window appears at the right half section, letting you select a different Voice for editing.

VOICE LIBRARY



1 Close button

Click this to close this window without applying the changes to the MOX6/MOX8 Editor VST.

2 [Category]/[Bank] checkboxes

Click either of these boxes to determine whether the Voices listed here are divided into Category folders or Bank folders.

3 [+]/[-] buttons

Click the [+] button to open all the folders so that all Voices appear in all folders. Click the [-] button to close all folders.

④ Folder (Category or Bank)

Click each folder to open or close it.

\bigcirc Voices

Indicates the Voices included in the folder. You can select the Voice temporarily by clicking it. When double-clicking a Voice, the Voice is actually selected and this window closes. You can also copy the Preset Voice(s) and User Voice(s) from the original location to any location in the User Bank by dragging-and-dropping the Voice(s). In the User Bank, you can rearrange the Voices by dragging-and-dropping the Voice(s) to a new location.

If you enter checkmarks to the checkboxes of your most-used or favorite Voice, you can call up a list of these Voices on the VOICE LIBRARY by setting the [Favorites] checkbox to on.



Selecting, copying, pasting or dragging-and-dropping multiple Voices is done in the same way as normal on your computer OS.

BINOTE By right-clicking on Windows / <control> key + clicking on Mac this section and selecting a menu, you can use the following functions.

- Opening/closing all the folders
- Determining whether the Voices listed here are divided into Category folders or Bank folders.
- Copying/pasting
- Changing the Voice name
- Deleting all the checkmarks of the Favorites checkboxes at left of the Voices
- Saving the VST presets

DINOTE There are two ways to save a VST preset.

- Right-click (Windows) / <control> key + click (Mac) on the Voice Library > Save VST presets
- Click the "Save a VST preset" button on the Cubase series

"Save VST presets" on the right click menu allows you to save a voice of the User Bank separately. You need to save the voice of the Preset Bank to the User Bank when you want to save the Voice of the Preset Bank as a VST preset.

The "Save a VST preset" button on the Cubase series will save all settings of the MOX6/MOX8 Editor VST as a VST preset.

6 Search Box

You can search for your desired Voice by inputting a keyword here.

7 [Favorites] checkbox

By entering the checkmark to this checkbox, you can call up a list of your favorite Voices on the VOICE LIBRARY. You can select your favorite or most-used Voices for this list by entering checkmarks to the appropriate checkboxes at the left of each Voice.

(8) [OK]/[Cancel] buttons

Click the [OK] button to apply the settings and close this window. Click the [Cancel] button to quit without applying the Voice selection.

9 Refresh

When the VOICE LIBRARY is shown in the Editor and you store the Voice(s) on the MOX6/MOX8 itself, the name(s) of the Voice(s) in the VOICE LIBRARY may be different from the Voice name(s) on the MOX6/MOX8. If this happens, click this button to update the Voice names of the VOICE LIBRARY.

EQ Lo, Mi, Hi (Part EQ)

Adjusts the equalizer settings for the current Voice.

Cho, Rev, Pan (Chorus, Reverb, Pan)

Adjusts the Chorus Send level, Reverb Send level and stereo Pan position for the current Voice by using the graphic knobs.

Volume

Adjusts the volume of the current Voice.

ARP (Arpeggio)

Turns Arpeggio playback on or off for the current Voice.

When the [AD Part] is selected:

This section lets you edit parameters for the AD Part in the Voice mode.

Cho, Rev, Pan (Chorus, Reverb, Pan)

Adjusts the Chorus Send level, Reverb Send level and stereo Pan position for the AD Part in the Voice mode by using the graphic knobs.

The Chorus Send and Reverb Send for the AD Part affect only when the USB I/O Mode parameter in the Utility mode is set to "1 StereoRec."

Volume

Adjusts the Volume for the AD Part.

Parameter Category section

You can edit detailed parameters for the current Part by clicking the **I** button (located near the top right of the window, just below the model name) to call up the Detailed Parameter section. Calling up the Detailed Parameter section moves the Parameter Category Section rightward as shown below.



Parameter Category section

The indicated categories in the Parameter Category section differs depending on the selected row: G, V, or AD Part, as illustrated below. Clicking each of Categories calls up the corresponding parameters in the Detailed Parameter section. The "G" indication shown below appears when clicking the "G" row. The "V" indication shown below appears by clicking the "V" row appearing only when the [Voice] tab is selected at the bottom of the Mixer section. The "AD" indication shown below appears by clicking the "AD" row appearing only when the [AD Part] tab is selected at the bottom of the Mixer section.



Open/Close button





This button opens/closes the Detailed Parameter section. When only the left arrow is indicated in white, the Detailed Parameter section is hidden and you can call it up by clicking here. When only the right arrow is indicated in white, the Detailed Parameter section is shown on the display, allowing you to edit the displayed parameters. The Detailed Parameter section can be closed by clicking this button. You can also conveniently open and close the Detailed Parameter window from your computer keyboard. Hold down the <Ctrl> key (Command key for Mac) and simultaneously press the left arrow (\leftarrow) key to open the window, or hold <Ctrl> key (Command key for Mac) and press the right arrow (\rightarrow) key to close it.

2 Global Settings

This is shown when the "G" row is selected in the Mixer section. Clicking each of the parameter categories calls up the corresponding Global parameters in the Detailed Parameter section.

3 Voice Common

This is shown when the "V" row is selected in the Mixer section. Clicking each of the parameter categories calls up the corresponding Voice Common parameters in the Detailed Parameter section.

④ Element or Drum Key

This is shown when the "V" row is selected in the Mixer section. When a Normal Voice is selected ("Element" is shown in the Parameter Category section) and you select an Element number, then clicking each of the parameter categories calls up the corresponding Element parameters in the Detailed Parameter section. When a Drum Voice is selected ("Drum Key" is shown in the Parameter Category section) and you select a key number (from C0 – C6), then clicking each of the parameter section.



5 6 Druh Key 4 C0 Oscillator/Pitch Filter Type/FEG Scale Amplitude Level/Pan/AEt Scale

When the Drum Voice is selected:

- (1) Checkboxes for Elements (available when the Normal Voice is selected) Turns each Element on or off.
- 2 [1] [8], [All] buttons (available when the Normal Voice is selected)

Selects the Element to be edited. When [All] is selected, the Element Quick Setting window appears in the Detailed Parameter section. This window conveniently lets you edit frequently-used Element parameters of all Elements in a single window.

- 3 Element Parameter categories (available when the Normal Voice is selected) Indicates the categories of Element parameters. Clicking each of the categories calls up the corresponding Element parameters in the Detailed Parameter section.
- (4) Checkbox for the Drum Key (available when the Drum Voice is selected) Turns the current Drum Key on or off.
- (5) Drum Key (available when the Drum Voice is selected) Indicates the current Drum Key to be edited. You can select the Drum Key to be edited by clicking either of the triangular buttons below the key indication.
- (6) Drum Key Parameter categories (available when the Drum Voice is selected) Indicates the categories of Drum Key parameters. Clicking each of categories calls up the corresponding Drum Key parameters in the Detailed Parameter section.

🔁 AD

This is shown when the AD Part is selected in the Mixer section. The Detailed Parameter section shows the Effect-related parameters.

6 *i* (Information)

Indicates information about the parameter at the cursor arrow position. To view the information for a desired parameter, mouse-over the knob, slider or setting for that parameter. You can switch this Information feature on or off by clicking the "i" box.

Detailed Parameter section

This section indicates the detailed parameters of the selected category for the current Voice or Global settings. This section introduces what parameters belong to each of the Parameter Categories. For details about each parameter, refer to the Owner's Manual of the MOX6/MOX8.

File Edit Bulk Help		(#YAMAHA moxs/moxe, V, G, F	=
Voice Song Pattern ONLINE Global Volume		Voice Name: Full Concert Grand V B indicat	
6 Voice Cate:Voice Name Pan Volume	Voice Common	Catesory Sub Catesory Minor/Fely KeryAsejan Acoustic Plano → Acoustic Plano Micro Tuning Name Root Prot → Eugu	GF
V DPn : Full Concerts (General ARP Control Set LF0 Effect	Pitch Pitch Bend Note Stift Britch +0 Lower Lower Upper -2seni +2seni	
	Image: Second	Part E0 Part E0 <td< th=""><th></th></td<>	
Voice AD Part	E Cutoff Resonance F50 Depth	Attack Provy Release 0 <th0< th=""> <th0< th=""> <th0< th=""> <</th0<></th0<></th0<>	

Three Indicators showing the Editing Status

One or more of the following three indicators are shown at the right top of the window when you edit a parameter.



Indicates that the Voice edits are not stored yet as a User Voice or Mixing Voice. This indicator disappears when you execute Voice Store (page 46).



Indicates that the Global edits are not stored yet. This indicator disappears when you execute Global Store (page 46).



Indicates that the parameter edits are not saved yet as a file.

Disconsecutive These indicators, "V," "G" and "F" are linked with the small squares at the top right of "1" – "16" boxes and "G" box in the Mixer section. The "V" and "G" indicators disappear if you execute the Voice Store, Mixing Store and Global Store operation, respectively. The "F" indicator and the small squares at the top right of the "G" box in the Mixer section disappear only if you execute the File Save operation. All the indicators and the small squares disappear if you execute the File Save operation.

Global Settings

This Parameter category which is called up by selecting the "G" row in the Mixer section consists of the following sub categories.

Master FX/EQ (Master Effect/EQ)

Clicking this in the Parameter Category section calls up the Master Effect/EQ parameters in the Detailed Parameter section.

Controller Assign

Clicking this in the Parameter Category section calls up the Controller Assign parameters in the Detailed Parameter section.

Voice Common

This Parameter Category is called up by selecting the "V" row in the Mixer section. The parameters belonging to this category lets you make the settings applied to all the Elements or Drum Keys commonly. The following sub categories are included.

General

Clicking this in the Parameter Category section calls up the parameters such as Voice name and pitchrelated parameters in the Detailed Parameter section.

ARP (Arpeggio)

Clicking this in the Parameter Category section calls up the Arpeggio-related parameters in the Detailed Parameter section. Clicking the row of the Bank/Category/Sub/Number/Name will call up the ARP LIBRARY window which lets you use the search function for the selecting Arpeggio Types, as with the VOICE LIBRARY window (page 16).

Controller Set

Clicking this in the Parameter Category section calls up the Controller Set parameters in the Detailed Parameter section.

LFO (Low Frequency Oscillator)

Clicking this in the Parameter Category section calls up the LFO-related parameters in the Detailed Parameter section.

Effect

Clicking this in the Parameter Category section calls up the Effect-related parameters in the Detailed Parameter section.

Element or Drum Key

This Parameter Category is called up by selecting the "V" row in the Mixer section. The "Element" is shown when the Normal Voice is selected while the "Drum Key" is shown when the Drum Voice is selected. The parameters belonging to this category lets you make the settings applied to each of the Elements or Drum Keys individually. The following sub categories are included.

For information about the checkboxes at left of each Element number 1 – 8 and "All," refer to page 21. For information about the Drum Key (note name) and checkbox, refer to page 21.

Oscillator/Pitch

Clicking this in the Parameter Category section calls up the parameters related to the Oscillator and Pitch in the Detailed Parameter section.

Filter

Clicking this in the Parameter Category section calls up the Filter-related parameters in the Detailed Parameter section.

Amplitude

Clicking this in the Parameter Category section calls up the Amplitude-related parameters in the Detailed Parameter section.

LFO/EQ (Low Frequency Oscillator/Equalizer)

Clicking this in the Parameter Category section calls up the parameters related to the LFO and EQ in the Detailed Parameter section.

AD

This Parameter Category is called up by selecting the "AD" row in the Mixer section. The parameters belonging to this category lets you make the settings applied to the AD Part in the Voice mode. The following sub category is included.

Effect

Clicking this in the Parameter Category section calls up the parameters related to the Effect applied to the AD Part of the Voice mode in the Detailed Parameter section.

When the Voice/Song/Pattern is set to "Song" or "Pattern"

Mixer section

Global/Multi Lo Lo-M Mid Hi-M Hi Chorus	Reverb	Master Effect	Volume		
6 Chorus	🗢 REV-X Hall	🗢 🛑 Multi Band Comp	¢ 127		
Part M S Category Bank No. Voice Name	EQ Lo Mi Hi	Ins.FX Cho Rev Pan Volum	e Rov Channel USB Output ARP		
1 Pn >PR1>001>Full Concert Grand	<u> </u>	<u> </u>	1 100 1 🗘 USB 38.4 💠 ——		
2 St > PR2 > 055 > Nylon Harmonics Vel	୍ର୍ ୍ର୍ର୍	- 000	73 2 🗘 USB 3&4 💠 🔛		- 10000 -
3 Bs > PR3 > 020 > Mid Range Finger	ውው	<u> </u>	85 3 🗘 USB 38.4 🗢 🗕	6 M0000000	
4 → Dr → PD → 007 > Rock Stereo Kit 2	ውው	<u> </u>	"å 107 4 🗘 USB 38.4 🗢 —		
5 >Pn >GM >002 >Rock Brite Piano	ውውው	$- \phi \phi -$	76 5 🗘 USB 3&4 🗢 🗕		
6 SW > PR5 > 010 > Velo Growi Legato	ውውው	<u> </u>	"å 104 6 🗘 USB 38.4 🗢 —		
7 St > 6M > 041 > Violin	ውው	$- \theta \theta \theta -$	65 7 \$ USB 38.4 \$		
8 Et > GM > 111 > Fiddle	ውው	$- \phi \phi -$	76 8 🗘 USB 38,4 🗢 🗕		
9 He > PR7 > 853 > Cell Division	ውውው	<u>– 🖓 🔿 –</u>	"8 113 9 🗘 USB 38.4 🗢 ——		
18 >Pn >PR1 >014 >Piano & Strings	ውውው	$- \phi \phi -$	59 10 🗘 USB 38.4 🗢 🗕		
11 Pn > PR1 > 011 > 80s Layer	ውው	<u>– 🔿 🔿 —</u>	"8 113 11 🗘 USB 38.4 🗢 —		
12 Pn >PR1 > 001 > Full Concert Grand	ውውው	$- \phi \phi \phi - \phi$	100 12 🗢 USB 38,4 🗢 —		
13 Pr >Pr >PR1 >001 >Full Concert Grand	ውውው	$- \phi \phi \phi -$	1 100 13 🗘 USB 38.4 🗢 🗕		
14 PRI > PRI > 001 > Full Concert Grand	ውውው	$- \phi \phi \phi -$	100 14 🗢 USB 38.4 🗢 —		
15 Pn >PR1 > 001 > Full Concert Grand	ውውው	$- \phi \phi \phi -$	100 15 🗢 USB 38.4 🗢 —		
16 >Pn >PR1 >001 >Full Concert Grand	ውውው	$- \theta \Theta \Phi -$	1 100 16 🗘 USB 38.4 🗢 💻		
Part 1-16 AD Part					

Global

This strip lets you edit the main parameters in the Song or Pattern mode, such as effect-related ones.



When editing any of the Global parameters described below, a small square appears at the top right of the "G" box until you save the edited data as a file. This indication is the same as the [F] indicator (page 29).



Lo, Lo-M, Mid, Hi-M, Hi (Master EQ)

Adjusts the Master EQ setting.

Chorus

Selects the Chorus type.

Reverb

Selects the Reverb type.

Master Effect

Turns the Master Effect on or off and selects the Master Effect type.

Volume

Adjusts the entire volume.

2 [Part 1-16]/[AD Part] tab

Selects the Parts to be edited from [Part 1-16] and [AD Part]. The illustration below indicates that the [Part 1-16] tab is selected.



O Part

When [Part 1-16] is selected:

This section lets you edit parameters for each Part. Clicking any of 1 – 16 turns the corresponding Part on. In the example illustration below, Part 1 is active.

When editing any of the Voice parameters such as Element parameters for each Part, a small square appears at the top right of the "1" – "16" box until you store the edited Voice as a User Voice or Mixing Voice or you save the edited data as a file. This indication is the same as the [V] indicator (page 29).

Part	M S	Category Bank No	. Voice Name	EQ Lo	Mi	Hi	Ins.FX	Cho Rev	Pan	Volume	Rov Channe	I USB Output	ARP
1		>Pn >PR1>0	01 > Full Concert Grand	\bullet	()	Ð	-	$\phi \phi$	\bigcirc	10	1	USB 3&4 ≑	
2		>Pn >PR1>0	Ø1 ≻Full Concert Grand	•	()	\bigcirc		$\bigcirc \bigcirc$	()	10	3 2 🗘	USB 3&4 韋	
з		>Pn >PR1>0	Ø1 ≻Full Concert Grand		()	\oplus	-	$\bigcirc \bigcirc$	()	10	3 🗘	USB 3&4 韋	

Part (Part number)

Indicates the Part number. Clicking here turns the corresponding Part on.

DICOTE In some situations, selecting a Part number on the Editor may not change a Part number on the MOX6/MOX8 and vice versa, even if the Editor is in the ONLINE status. If you come across such a situation and you want to match the Part number of the MOX6/MOX8 with the one in the Editor, change the Part number via the panel controls of the MOX6/MOX8.

Mute/Solo



1 Mute

Sets the Mute status for each Part. Clicking "M" here changes the Mute status for all Parts simultaneously.

2 Solo

Selects the Solo Part. Only one Part can be soloed at a time.

Category, Bank, No. and Voice Name

Indicates the Category Bank and name of the Voice assigned to each Part. When clicking here, the VOICE LIBRARY window appears at the right half section, letting you select a different Voice for the current Part. Using the VOICE LIBRARY is the same here as in the Voice mode; for details, refer to page 16.

EQ Lo, Mi, Hi (Part EQ)

Adjusts the equalizer settings for each Part.

Ins.FX (Insertion Effect Switch)

Switches the Insertion Effect on or off.

DNOTE Insertion Effects can be applied up to three Parts.

Cho, Rev, Pan (Chorus, Reverb, Pan)

Adjusts the Chorus Send level, Reverb Send level, and stereo Pan position for each Part by using the graphic knobs.

Volume

Adjusts the Volume for each Part.

Rcv Channel (Receive Channel)

Determines the MIDI Receive Channel for each Part.

USB Output

Determines the USB Port for audio output of each Part.

ARP (Arpeggio)

Turns Arpeggio playback on or off for each Part.

DINOTE Up to four Parts can play back the Arpeggio simultaneously.

When [AD Part] is selected:

This section lets you edit parameters for the AD Part in the Song or Pattern mode.



Ins FX (Insertion Effect)

Switches the Insertion Effect on or off.

Cho, Rev, Pan (Chorus, Reverb, Pan)

Adjusts the Chorus Send level, Reverb Send level and stereo Pan position for the AD Part by using the knob icons.

Volume

Adjusts the Volume for the AD Part.

Parameter Category section

You can edit detailed parameters for the current Part by clicking the button (located near the top right of the window, just below the model name) to call up the Detailed Parameter section. Calling up the Detailed Parameter section moves the Parameter Category Section rightward as shown below.

0 RW • •				
File Edit Bulk Help			🛞 YAMAHA	mo%e/mo%e
Voice Song Pattern ONLINE	Reverb Master B	Effect Volume		
6 6 Chorus		Aulti Band Comp 🖨 127		
Part M S Category Bank No. Voice Name		Rev Pan Volume Rov Channel	JSB Output ARP	Part Common
1 Pn >PR1 > 801 > Full Concert Grand				General
2 Pn >PR1 >001 >Full Concert Grand	$\phi\phi\phi = \phi$	0 0 to 100 2 ÷		RCV/Control Set LED
3 Pn >PR1>801>Full Concert Grand	$\Phi \Phi \Phi = 0$	Ø 🕂 — 🔒 100 3 💠		= Effect
4 Pn > PR1 > 801 > Full Concert Grand	$\oplus \oplus \oplus = \emptyset$			Element
5 Pn >PR1 > 801 > Full Concert Grand	$\phi\phi\phi = \phi$			I = Oscillator / Pitch
6 Pn >PR1 >001 >Full Concert Grand	$\Phi \Phi \Phi = \Phi$			Filter Type/FEG
7 Pn >PR1 > 001 > Full Concert Grand	$\phi \phi \phi = \phi$			Scale
8 Pn >PR1 > 801 > Full Concert Grand	-000 - 0			Amplitude
9 Pn >PR1>801>Full Concert Grand	$\phi - \phi \phi \phi$			E Level/Pan/AEG Scale
10 Pn >PR1 > 001 > Full Concert Grand	ወወ – ወ	🕢 🕕 💶 🕯 100 10 💠		E = LF0/EQ
11 Pn >PR1 > 001 > Full Concert Grand	$\phi - \phi \phi \phi$	🕗 🕕 100 11 💠		
12 Pn >PR1>801>Full Concert Grand	$\Theta = \Theta \Theta$	A 108 12 C		
13 Pn >PR1>001>Full Concert Grand	- 000 - 0	(-) 108 13 \$		BII
14 Pn >Pr >Pil >001 >Full Concert Grand	<u> </u>	A 100 14 A		1
15 Pn >PR1 > 001 > Full Concert Grand	ወወጣ – ወ			
16 Pn >PR1 > 001 > Full Concert Grand	<u> </u>	A 100 16 A A A		
Part 1-16 AD Part				
1 TON	E 2 1 +0 1 +0 1 +0	Portamento EQ EQ Low(dB) EQ Mid 64 EFFECT +8.08 6 ARP	F(H2) EQ M6d(dB)	9h(dB) ARP MIDI +0.00 1 2 3 4 5 6
Quick Setup Direct Monitor				
•St Alone • 5 • 6 Part • 1				
USB I/O Mode 🛛 VST 😂 Local Ctrl 🔲 2 🗕				
	~			
Di Italiu o V			(*) YAMAHA	mo%e/mo%e
File Edit Bulk Help				mo%e/mo%e VMBP
File Edit Bulk Help Voice Song Pattern ONLINE Blobal/Multi Volume		Voice Name: Full Concert Grand Category Sub Ca	cegory Rov Char	N 이 이 이 이 이 이 이 이 이 이 이 이 이 이 이 이 이 이 이
File Edit Bulk Help Valce Song Pattern ONLINE Bobal/Aulti Volume G 6 6	Part Common	Voice Name: Full Concert Grand	tic 🗘 Kov Char tic 🗘 1 Micro Tui	vonsis nel Mono/Poly KeyAssian ParmuithVoice ♦ poly ♦ multi ♦ ———————————————————————————————————
File Edit Bulk Hele Volce Song Pattern ONLINE Gobal/Auft Volume 6 1 Part H S Cate-Volce Name Part O Volume		Voice Nane: Full Concert Grand Category Sub Ca Acoustic Plano \$ Acoust	egory Rov Char tic \$1 Micro Tur Pre1	vonsis nel Mono/Poly KeyAssian ParmuithVoice ♦ poly ♦ multi ♦ ———————————————————————————————————
File Edit Duk Help Volce Song Pattern ONLINE Gobu/Aufd Volume 0 G	Part Common General ARP I RCV/Control Set	Voice Name: Full Concert Grand Category Sub Ca Acoustic Plano \$ Acoust Pitch Pitch E Note Shift Detune(Hz)	egory Rov Char tic \$1 Micro Tur Pre1	000080 nel Mono/Poly KeyAssian ParaunthVolor Poly ⇒ aulti ≎ — ng Name — Root ← Equal
File Edit Duk Help Volce Song Pattern ONLINE Goba/Aufti Volume 127 Part H. S. Cate-Volce Name Pan 1 Ph. Fiel Concerts 121 2 Ph. Fiel Concerts 103	Part Common	Voice Nane: Full Concert Grand Category Sub Ca Acoustic Plano C Acoust Pitch Pitch E Hote Shift Detune(Hz) +8 00.8 Lower	cegory tic + Rov Chan Micro Tu Pre1	Unin ParauthVeor Poly Caudit ParauthVeor Poly Caudit ParauthVeor Equal Camerotics Tate Mode Tate Mode Tate Caudit ParauthOperation Caudit ParauthVeor Caudit ParauthVeor Poly Caudit Parau
File Edit Duk Help Volce Song Pattern ONLINE Gobu/Aufd Volume 127 Part H State-Volce Name Pan 1 Pn::Full Concerts Image: Concerts Image: Concerts 2 Pn::Full Concerts Image: Concerts Image: Concerts	Part Common General Republic ARP RCV/Control Set LFO	Voice Nane: Full Concert Grand Category Sub Ca Acoustic Plano C Acoust Pitch Pitch E Hote Shift Detune(Hz) +8 00.8 Lower	cegory Rov Char tic \$ 1 Micro Tur Pret Sernel Pre- Switch	Visional Mono/Poly KeyAsson ParsauthWoo Poly Caular Eval Earmento Tane Mode Tane Mode Tane Mode Tane Mode Tane Mode Tane Mode Caular
File Edit Bulk Help Volce Song Pattern ONLINE G Multi Volume G Multic Volume B Part H S D Ph::Full Concerts Multic B Ph::Full Concerts Multic	Part Common General # ARP # RCV/Control Set # LF0 # Effect Element @ 1 @ Oscillator/Pitch	Voce Have: Full Concert Grand Category Shi Ca Acoustic Plano Category Acoust Pitch Plano Category Acoust Pitch Plano Category Category Pitch Plano Category	segory to	Visional Mono/Poly KeyAsson ParsauthWoo Poly Caular Eval Earmento Tane Mode Tane Mode Tane Mode Tane Mode Tane Mode Tane Mode Caular
File Edit Bulk Help Volce Song Pattern ONLINE Bibb/Aulti Volue Volue 6	Part Common Part Common a RRP B RCV/Control Set Element Element	Vocet Hase: Full Concert Grand Creating: Sub Ci Acoustic Plano ◆ - Acoustic Pritch Note Skit: petendilic) 	Linit Upper	Visional Mono/Poly KeyAsson ParsauthWoo Poly Caular Eval Earmento Tane Mode Tane Mode Tane Mode Tane Mode Tane Mode Tane Mode Caular
File Edit Buil: Hele 'Yoloe © Song : Pattern • ONLINE Golds/Hull: • ONLINE • International State G * • International State • International State G * • International State • International State • International State G * • Phil Concerts • International State • International State G • Phil Fail Concerts • International State • International State • International State G • Phil Fail Concerts • International State • International State • International State	Part Common Part Common ARP BCV/Control Set Effect Effect Effect Effect Effect Effect Effect Effect	Picce Hase: Full Concert Grand Cheering: Sub Check Acoustic Plano Sub Check Pittich Pittich Notes Sub Check Pittich Notes Sub Check Pittich Pittich Pittich Velocity Grass -2 Pittick Velocity Grass Velocity Grass Note Lower -2	esery te Particle P	Visional Mono/Poly KeyAsson ParsauthWoo Poly Caular Eval Earmento Tane Mode Tane Mode Tane Mode Tane Mode Tane Mode Tane Mode Caular
File Edit Buil: Hele Volce © Song : Pattern • ONLINE God //Multi • Unine • I22 G • Example • I22 G • Example • I22 I • Statistics • Pan : Fail Concerts I • Statistics • I22 I • Statistics • I23 I • Statistics • I24 I • I24 I24 <td>Part Common General ARP RCV/Control Set Effect Effect Biter Scale Gale Amelitude</td> <td>Voce Have: Full Concert Grand Category & Sub Ca Acousto Plano & Acoust Pittech Plano & Acoust Pittech Plano & Acoust Pittech Plano & Acoust Pittech & Pittech & Pittech & Pittech & Pittech & Acoust Pittech & Pittech & Acoust Pi</td> <td>Linit Upper</td> <td>Constraints of the second second</td>	Part Common General ARP RCV/Control Set Effect Effect Biter Scale Gale Amelitude	Voce Have: Full Concert Grand Category & Sub Ca Acousto Plano & Acoust Pittech Plano & Acoust Pittech Plano & Acoust Pittech Plano & Acoust Pittech & Pittech & Pittech & Pittech & Pittech & Acoust Pittech & Pittech & Acoust Pi	Linit Upper	Constraints of the second
File Edd Buil: Hele Volse © Song : Pattern • DNLINE Gold //Multi • Unine • dig G * • DNLINE G • DNLINE • DNLINE G • DNLINE • DNLINE G • DNLINE • DNLINE G • DN: Fail Concert C • B	Part Common ARP RCV/Control Set Element Conscillator/Pitch Conscillator/Pitch Conscillator/Pitch Conscillator/Pitch Conscillator/Pitch Conscillator/Pitch Conscillator/Pitch Conscillator/Pitch Conscillator/Pitch Conscillator/Pitch Conscillator/Pitch Conscillator/Pitch	Picco Hase: Full Concert Grand Correction: Sub Car Acoustic Plano Sub Ca Sub Car Acoustic Plano Pitch Note Shirt: Detundition Pitch II Lower Velocity Grade Lower Velocity Grade Note Lower Velocity Grade Note Lower Daugh Offset Lower Gd 64	sesory Rev Char bio Beend Perm User Char bread Perm Second Perm Second Perm Se	Critili © P roll Mono/Poly Key Asegn Paramethiluto mol Mono/Poly Award P mol Mono/Poly Award P mol Mono/Poly Award P mol Mono/Poly Award P mol Mono/Poly Award P Root P Ecolor Compared P Compared P C
File Edd Buil: Hele Volke © Song : Pattern • ONLINE G ball //Buil: Volke • E123 G a D Fn: Fail Concerts • B 123 Part H S Cate: Voice Nam • Nolke 1 • S Ph: Fail Concerts • B 100 2 • S Ph: Fail Concerts • B 100 3 • S Ph: Fail Concerts • B 100 4 • S Ph: Fail Concerts • B 100 5 • S Ph: Fail Concerts • B 100 6 • S Ph: Fail Concerts • B 100 7 • S Ph: Fail Concerts • B 100 8 • S Ph: Fail Concerts • B 100	Part Common ARP BCV/Control Set Effect Effect Effect Effect Effect Effect Editor Augustator/Pitch Effect Editor Effect Editor Effect Editor Effect Editor E	Pitceh Pitceh Pitceh	espory be Partial terrod Upper 12 Upper 12 Upper 12 Upper 12 Upper 12 Upper 12 12 12 12 12 12 12 12 12 12	Constructions of the second se
File Edd Buil: Hele Wolce © Song : Pattern • ONLINE Goad • ONLINE • E 123 Gat * Song : Pattern • ONLINE G • E 123 Part * S Cate: Voice Name • E 123 1 • S Pri: Fall Concerts • E 108 2 • S Pri: Fall Concerts • E 108 3 • S Pri: Fall Concerts • E 108 4 • S Pri: Fall Concerts • E 108 6 • S Pri: Fall Concerts • E 108 9 • S Pri: Fall Concerts • E 108	Part Common General ARP RCV/Control Set Effect Effect Band Amelitude Amelitude Amelitude Scale	Pitceh Pitceh Pitceh	Argory Co Co Co Co Co Co Co Co Co Co	Construction Incl. Mono/Poly Key Assign Paraultition Incl. Mono/Poly Build Paraultition Incl. Mono/
File Edd Buil: Hele Uoloe 0.001,0 0.01,114 Uoloe G 1 0.01,000 1.01 1.021 G 2 0.000,0 Part Voice Name 0.01 1.021 1 0.000,0 Part Voice Name 0.000,0 1.021 1.021 2 0.000,0 Part. Fall Concert (0.000,0 1.021 1.021 3 0.000,0 Part. Fall Concert (0.000,0 1.021 1.021 4 0.000,0 Part. Fall Concert (0.000,0 1.021 1.021 4 0.000,0 Part. Fall Concert (0.000,0 1.021 1.021 5 0.000,0 Part. Fall Concert (0.000,0 1.021 1.021 6 0.000,0 Part. Fall Concert (0.000,0 1.021 1.021 6 0.000,0 Part. Fall Concert (0.000,0 1.021 1.021 9 0.000,0 Part. Fall Concert (0.000,0 1.020 1.020	Part Common General ARP RCV/Control Set Effect Effect Band Amelitude Coale Co	Pitce Hase: Full Concert Grand Cotaging Sub C Acoust Sub C Acoust Pitce Hase Pitce Hase Pitce Hase	espory be Partial terrod Upper 12 Upper 12 Upper 12 Upper 12 Upper 12 Upper 12 12 12 12 12 12 12 12 12 12	Units P nel Mono/Poly KeyAagn Parls Muld Parls Rud Parls Rud Parls Rud Parls Root Root
File Edd Buil: Hele Uolor 0 Song Pattern ONLINE Goba/Audit Volume Image: Control of the second secon	Part Common General ARP RCV/Control Set Effect Effect Band Amelitude Coale Co	Picce Hase: Full Concert Grand Chiegery Acoustic Plano Pitch	Argory bo bo construction	Units P nel Mono/Poly KeyAagn Parls Muld Parls Rud Parls Rud Parls Rud Parls Root Root
File Edd Buil: Hele 1 Yolor © Song : Pattern • ONLINE 6 ' Osarg : Pattern • ONLINE 6 ' Osarg : Pattern • ONLINE 1 ' O Song : Pattern • ONLINE 1 ' Osarg : Pattern • Online 2 ' • DPn : Fail Concert (• Isarge 3 ' • DPn : Fail Concert (• Isarge 4 ' • DPn : Fail Concert (• Isarge 5 ' • DPn : Fail Concert (• Isarge 6 ' • DPn : Fail Concert (• Isarge 7 ' • DPn : Fail Concert (• Isarge 8 ' • DPn : Fail Concert (• Isarge 9 ' • DPn : Fail Concert (• Isarge 9 ' • DPn : Fail Concert (• Isarge 9 ' • DPn : Fail Concert (• Isarge 9 ' • DPn : Fail Concert (• Isarge 10 ' • DPn : Fail Concert (• Isarge 11 ' • DPn : Fail Concert (• Isarge 12 ' DPn : Fa	Part Common General ARP RCV/Control Set Effect Effect Benent Be	Pitce Hase: Full Concert Grand Cotaging Sub C Acoust Sub C Acoust Pitce Hase Pitce Hase Pitce Hase	sejory b C C C C C C C	Critili D nel Mono/Poly Key Asegn Parauthioto nel Mono/Poly Key Asegn Parauthioto nel Mono/Poly Key Asegn Parauthioto nel Mono/Poly Rev Asegn Parauthioto Rev Asegn Parauthioto R
File Edd: Buil: Hele Uolor 0.001,0 0.01,114 Uolor Go 1 0.01,000 1.01 1.021 G 2 0.02,000 0.01,114 1.021 1 0.02,000 0.000 1.001 1.001 2 0.02,000 0.000 1.001 1.002 3 0.02,000 0.000 1.003 1.003 4 0.02,000 0.000 1.003 1.003 5 0.02,000 0.000 1.003 1.003 6 0.02,000 0.000 1.003 1.003 6 0.02,000 0.000 1.003 1.003 6 0.02,000 0.000 1.003 1.003 7 0.02,000 0.000 1.003 1.003 8 0.02,000 0.000 1.003 1.003 9 0.02,000 0.000 1.003 1.003 10 0.02,000 0.000 0.000<	Part Common General ARP RCV/Control Set Effect Effect Benent Be	Picce Hase: Full Concert Grand Chickey Acoustic Plano Pitch Pitch <	Argory char bo char	Critili P nel Mono/Poly Key Asep: Paraulthioto nel Mono/Poly Key Asep: Paraulthioto nel Mono/Poly Key Asep: Paraulthioto nel Mono/Poly Key Asep: Paraulthioto Root Table 2 tel to the set tel tel tel tel tel tel tel tel tel tel
File Edd: Buil: Hele Violes 0:000 Pattern 0.NLINE Sodar/Mark 0.NLINE 0.NLINE 6 0 0.NLINE 6 0 0.NLINE 1 0.2010 0.NLINE 2 0.2010 0.NLINE 2 0.2010 0.NLINE 2 0.2010 0.NLINE 2 0.2010 0.NLINE 3 0.2010 0.NLINE 4 0.2010 0.NLINE 2 0.2010 0.NLINE 3 0.2010 0.NLINE 4 0.2010 0.NLINE 5 0.2010 0.NLINE 6 0.2010 0.NLINE 0 0.2010 0.NLINE <tr< td=""><td>Part Common General ARP RCV/Control Set Effect Effect Benent Be</td><td>Picce Hase: Full Concert Grand Chickey Sub C Acoustic Plano Sub C Pitch Pitch E Pitch E Pitch E <</td><td>Rev Char 50 · · · · · · · · · · · · · · · · · · ·</td><td>Critili D Rei Mono/Poly Mono/Poly Key Asegn Parauethioto With Poly With A and Parauethioto Parauethioto Root Eco The Mode Table 4 Commercial Commercia</td></tr<>	Part Common General ARP RCV/Control Set Effect Effect Benent Be	Picce Hase: Full Concert Grand Chickey Sub C Acoustic Plano Sub C Pitch Pitch E Pitch E Pitch E <	Rev Char 50 · · · · · · · · · · · · · · · · · · ·	Critili D Rei Mono/Poly Mono/Poly Key Asegn Parauethioto With Poly With A and Parauethioto Parauethioto Root Eco The Mode Table 4 Commercial Commercia
Pite Edit Bulix Heie I Volce I Song I: Pattern I ONLINE G J I Song I: Pattern I ONLINE I I Song I: Pattern I I I I I I I I I I I I I I I I I I I	Part Common ARP RCV/Control Set Effect Eff	Pitceh Pitceh	sejory b	Unit Paraulthous nel Mono/Poly Key Asep: Paraulthous nel Mono/Poly Key Asep: Paraulthous nel Mono/Poly Key Asep: Paraulthous Roat Table Comments Table Comments telenants
File Edd Buil: Hele Soon Pattern ONLINE Gobardiation ONLINE Gobardiation ONLINE G Soon Pattern ONLINE G Soon Pattern ONLINE G Soon Pattern ONLINE G Soon Pattern Mail Soon Pattern G Soon Pattern Mail Soon Pattern G Soon Pattern Mail Soon Pattern I Soon Pattern Mail Soon Pattern	Part Common Part Common ARP BCV/Control Set Effect	Pitceh Pitceh	Report to	UTI DI INTERNATIONAL CONTRACTOR DU INTERNATIONAL CONTRACTOR DU INTERNAT
File Edd Buil: Hele Image: Source of the state of t	Part Common ARP RCV/Control Set Effect Eff	Pitce Hase: Full Concert Grand Cotage: Sub C Acoust Plano Sub C Pitce F Pitce F Pitce Sub C Pitce F	Report to	United United </td
File Edit Buk Hele 1 Volce © Song Pattern • ONLINE Buk/Mult Volce • ONLINE 6 • Online • Online 1 • Other State • Online 2 • Other State • Other State 2 • Other State • Other State 3 • Other State • Other State 4 • Other State • Other State 4 • Other State • Other State 5 • Other State • Other State 6 • Other State • Other State 7 • Other State • Other State 8 • Other State • Other State 9 • Other State • Other State 9 • Other State • Other State 9 • Other State • Other S	Part Common ARP RCV/Control Set Effect Eff	Pitceh Pitceh	Report to	UTI DI INTERNATIONAL CONTRACTOR DU INTERNATIONAL CONTRACTOR DU INTERNAT

Parameter Category section

Parameter Category section

Detailed Parameter section

The indicated categories in the Parameter Category section differs depending on the selected Part type: M, Part 1 – 16, or AD Part. Clicking each of the Categories calls up the corresponding parameters in the Detailed Parameter section. The "G" indication shown below appears when clicking the "G" row. The "Part 1 – 16" indication shown below appears by clicking any place on the Part row appearing only when the [Part 1-16] tab is selected at the bottom of the Mixer section. The "AD" indication shown below appears by clicking the "AD" row appearing only when the [AD Part] tab is selected at the bottom of the Mixer section.



Open/Close button





Same as in the Voice mode (page 20).

Oliver Settings

This is shown when the "G" row is selected in the Mixer section. Clicking each of the parameter categories calls up the corresponding Global parameters in the Detailed Parameter section.

Multi Common

This is shown when the "G" row is selected in the Mixer section. Clicking each of the parameter categories calls up the corresponding Common parameters in the Detailed Parameter section.

Part Common

This is shown when one of Parts 1 - 16 is selected in the Mixer section. Clicking each of the parameter categories calls up the corresponding Common parameters of the Voice/Part in the Detailed Parameter section.

5 Element or Drum Key

This is shown when one of Parts 1 - 16 is selected in the Mixer section. When a Normal Voice is assigned to the current Part ("Element" is shown in the Parameter Category section) and you select an Element number, then clicking each of the parameter categories calls up the corresponding Element parameters in the Detailed Parameter section. When a Drum Voice is assigned to the current Part ("Drum Key" is shown in the Parameter Category section) and you select a key number (from C0 – C6), then clicking each of the parameter categories calls up the corresponding Drum Key parameters in the Detailed Parameter categories calls up the corresponding Drum Key parameters in the Detailed Parameter categories calls up the corresponding Drum Key parameters in the Detailed Parameter section.

For details, see the Voice mode (page 21).

6 AD

Same as in the Voice mode (page 21).

i (Information)

Same as in the Voice mode (page 21).

Detailed Parameter section

This section indicates the detailed parameters of the selected category for the current Part and the Voice assigned to the current Part, or the Global settings. This section introduces what parameters belong to each of the Parameter Categories. For details about each parameters, refer to the Owner's Manual of the MOX6/ MOX8.



Four Indicators showing the Editing Status

One or more of the following four indicators are shown at the right top of the window when you edit a parameter.



Indicates that the Voice edits are not stored yet as a User Voice or Mixing Voice. This indicator disappears when you execute Voice Store (page 46).



Indicates that the Multi edits are not stored yet. This indicator disappears when you execute Mixing Store (page 47).



Indicates that the Global edits are not stored yet. This indicator disappears when you execute Global Store (page 46).



Indicates that the parameter edits are not saved yet as a file.

These indicators, "V," "M," "G" and "F" are linked with the small squares at the top right of "1" – "16" boxes and "G" box in the Mixer section. The "V," "M" and "G" indicators disappear if you execute the Voice Store, Mixing Store and Global Store operations, respectively. The "F" indicator and the small squares at the top right of the "G" box in the Mixer section disappear only if you execute the File Save operation. All the indicators and the small squares disappear if you execute the File Save operation.

Global Settings

This Parameter category, called up by selecting the "G" row in the Mixer section, consists of the following sub categories.

Controller Assign

Clicking this in the Parameter Category section calls up the Controller Assign parameters in the Detailed Parameter section.

Multi Common

This Parameter category, called up by selecting the "G" row in the Mixer section, consists of the following sub categories.

Effect

Clicking this in the Parameter Category section calls up the Effect-related parameters in the Detailed Parameter section.

Master FX/EQ (Master Effect/EQ)

Clicking this in the Parameter Category section calls up the parameters related to the Master Effect and EQ in the Detailed Parameter section.

Part Common

This Parameter category which is called up by selecting any of the "1" – "16" rows in the Mixer section consists of the following sub categories.

General

Clicking this calls up the GENERAL window in the Parameter Category section. This window lets you edit the Voice Common parameters such as naming and the Mixing Part parameters such as Pitch, Portamento, Note/Velocity Limit and Part EQ. In the Part Common General section, both the Mixing Part parameters (the "M" indicator appears at the top right during editing) and Voice Common parameters (the "V" indicator appears at the top right during editing) can be edited. To distinguish between them, a small dot is shown at the immediate left of the parameters.

ARP (Arpeggio)

Clicking this in the Parameter Category section calls up the parameters related to the Arpeggio assigned to the current Part in the Detailed Parameter section.

Clicking the row of the Bank/Category/Sub/Number/Name will call up the ARP LIBRARY window which lets you use the search function for the selecting Types, as with the VOICE LIBRARY window (page 16).

RCV/Control Set (Receive/Control Set)

Clicking this calls up the RCV/CONTROLLER SET ASSIGN window in the Parameter Category section. This window lets you edit the Receive Switch parameters for the current Part and the Controller Set Assign parameters for the current Part and the Voice.

LFO (Low Frequency Oscillator)

Clicking this in the Parameter Category section calls up the LFO-related parameters of the Voice assigned to the current Part in the Detailed Parameter section. This Parameter Category is not available if the Drum Voice is assigned to the current Part.

Effect

Clicking this in the Parameter Category section calls up the parameters related to the Insertion Effect for the current Part and System Effect applied to all the Parts in the Detailed Parameter section.

Element or Drum Key

This Parameter Category is called up by selecting any of the "1" – "16" rows in the Mixer section. The "Element" indication appears when the Normal Voice is assigned to the current Part while the "Drum Key" is shown when the Drum Voice is assigned. The parameters belonging to this category lets you make the settings applied to each of the Elements or Drum Keys individually. For details, see the Voice mode section.

AD

This Parameter Category is called up by selecting the "AD" row in the Mixer section. The parameters belonging to this category lets you make the settings applied to the AD Part in the Song or Pattern mode. The following sub category is included.

Effect

Clicking this in the Parameter Category section calls up the parameters related to the Effect applied to the AD Part of the Song or Pattern mode in the Detailed Parameter section.

Bottom section



Controller Set status

This section indicates which controller on the MOX6/MOX8 instrument is used as the Control Source of the Controller Set.



1 Part

Indicates the current Part.

2 Control Source (Controller)

Indicates the six controllers as source of the Controller Set. The abbreviations for the Controllers are as follows:

Indication	Control Source		
PB	Pitch Bend Wheel		
MW	Modulation Wheel		
AT	After Touch (keyboard)		
FC	Foot Controller		
FS	Foot Switch		
RB	Ribbon Controller		

Indication	Control Source
BC	Breath Controller
AS1	ASSIGN 1 knob
AS2	ASSIGN 2 knob
FC2	Foot Controller 2
AF1	ASSIGNABLE FUNCTION 1 button
AF2	ASSIGNABLE FUNCTION 2 button

3 On/Off status

When a lamp is turned on, a certain function (Destination) is assigned to the corresponding Source (controller). When a lamp is turned off, no function (Destination) is assigned to the corresponding Source (controller).

2 Quick Setup, USB I/O Mode, Direct Monitor, Local Ctrl

On the MOX6/MOX8, up to 6 parameter settings for the computer connection can be stored as Quick Setups. The stored Quick Setups can be recalled from the Quick Setup section of this Editor as well as via the [QUICK SETUP] button of the MOX6/MOX8.

SNOTE This Editor cannot edit or store each setup.

Quick Setup			Direct Moni	itor
 DAW Rec 	Anp Rec	 Drot Arp 	AD	
 St Alone 	• 5	• 6	Part	
USB I/O Mode	e VST	+	Local Ctrl	

From among the parameters included in Quick Setup, you can confirm the status of "USB I/O Mode", "Direct Monitor" and "Local Ctrl" with the indicators. By clicking these indicators, you can also edit these parameters.

Quick Edit Knobs

This section lets you adjusts various parameters assigned to the Knobs on the front panel of the MOX6/ MOX8 instrument.



1 [TONE 1]/[TONE 2]/[TONE 3] buttons and Knobs 1 – 4

Clicking the [TONE 1]/[TONE 2]/[TONE 3], selects the set of functions assigned to the four knobs on the right. The functions shown above each of the knobs are same as those printed on the front panel of the MOX6/MOX8.

You can click each of the four knobs to adjust the value of the assigned function.

[EQ]/[EFFECT]/[ARP] buttons and Knobs 5 – 8

Clicking the [EQ]/[EFFECT]/[ARP], selects the set of functions assigned to the four knobs on the right. The functions shown above each of the knobs are same as those printed on the front panel of the MOX6/MOX8. You can click each of the four knobs to adjust the value of the assigned function.

ARP (Arpeggio)

Allows you to change the Arpeggio related setup (on/off status and selecting 1 - 6).

6 MIDI monitor



Turns the MIDI monitor function on or off. By turning this MIDI jack icon on, the note on/off messages transmitted to the MOX6/MOX8 will be shown on the virtual keyboard at the bottom of the Editor window. Turn the MIDI monitor on if you want to confirm the edit result by playing the MOX6/MOX8 or the MIDI keyboard connected to the computer.

6 [A.Func] (Assignable Function) button

This button is related to "All AF off," "AF1 on" and "AF2 on" selected as a value of the XA Control parameter on the OSCILLATOR/PITCH window of the Normal Voice Element Edit. For details, refer to the Owner's Manual of the MOX6/MOX8.

Keyboard

Allows you to audition the edited sound. Note on/off messages corresponding to the keys you click or drag will be transmitted to the external device via the MIDI port specified in the Editor Setup window (page 37) as the MIDI OUT parameter.

- The velocity when clicking a key is determined by the setting of the Keyboard Velocity parameter (page 39) in the Setup window.
- When a Drum Voice is edited, you can initialize the parameter settings of each key by right-clicking (Windows) / <control> key + clicking (Mac) on the virtual keyboard. From the menu called up by right-clicking (Windows) / <control> key + clicking (Mac), selecting "Initialize key" will initialize all the parameter settings except for the waveform assignment of the currently selected drum key, while selecting "Initialize key (with Wave)" will initialize the all the parameter settings including the waveform assignment.



Basic Operations

This section covers basic operations of the MOX6/MOX8 Editor VST.

Naming a Voice

You can assign an original name of your choice to the edited Voice on the VOICE LIBRARY window, GENERAL window in the Part Common General, and the Store window.

From the VOICE LIBRARY window (page 16), select a User Voice or Mixing Voice then click the selected Voice so that you can edit the name. After editing the Voice name, pressing the <Enter> key or locating the cursor to another parameter finalizes the edited name while pressing the <Esc> key aborts it.

📃 Natural Grand S6	Acoustic	· · · · ·	Normal User 1	1
Full Concert Grand	Acoustic		Normal User 4	13
Concert Grand Piano	Acoustic		Normal GM	
📕 Ballad Key	Layer	Keyboard	Normal Preset 1	10
📕 80s Layer	Layer	Keyboard	Normal Preset 1	11

From the GENERAL window (below) and Store window (page 46), locate the cursor in the text box of "Voice Name" at the top of this window, then edit the name in the text box as desired. After editing, pressing the <Enter> key or locating the cursor to another parameter finalizes the edited name.

GENER	1L		
Voice Name:	Full Concert	Grand	
Category		Sub Category	
1 Acoustic	Piano 🔶	Acoustic	.

Searching for a Voice/Arpeggio Type



You can search for the desired Voice and Arpeggio type on the VOICE LIBRARY window (page 16) and ARP LIBRARY window just by inputting a keyword in the text box at the bottom of these windows respectively. Likewise, the Search function is available on the Import window (page 35).

Inputting a numerical value

127

When double clicking a value box such as that shown above, the value box can be edited and you can input a numerical value directly by using numeric keys. After editing, pressing the <Enter> key or locating the cursor to another parameter finalizes the value while pressing the <Esc> key aborts it. You can edit the value also by using the Cursor key or <Page Up>/<Page Down> key after clicking this box.

In Windows, to reset the value to its default, simultaneously hold down the <Ctrl> key and click on the value box. On the Mac, to reset the value to its default, simultaneously hold down the Command key and click on the value box.

For certain parameters, the value can be edited only by using the mouse and cannot be input directly by using the numeric keys.

Selecting a value

REV-X Hall

Clicking inside the value box like such as that shown above calls up the list box, from which you can select the desired value. You can also select the value also by clicking the arrow at right end of this box.

Using a knob



Dragging or clicking the knob such as that shown above changes the value of the corresponding parameter. After clicking this, you can edit the value by using the cursor key or <Page Up>/<Page Down> key. If you want to make fine adjustments to the value, drag the mouse while holding the <Shift> key. The specific operation of the knob is determined by the settings of the Knob Guide parameter and Knob Mouse Control parameter in the Setup window (page 37). In Windows, to reset the value to its default, simultaneously hold down the <Ctrl> key and click on the knob. On the Mac, to reset the value to its default, simultaneously hold down the Command key and click on the knob.

Using a slider



Dragging or clicking the slider such as that shown above changes the value of the corresponding parameter. After clicking this, you can edit the value by using the cursor key or <Page Up>/<Page Down> key. If you want to make fine adjustments to the value, drag the mouse while holding the <Shift> key. The specific operation of the slider is determined by the setting of the Slider Mouse Control parameter in the Setup window (page 37). In Windows, to reset the value to its default, simultaneously hold down the <Ctrl> key and click on the slider. On the Mac, to reset the value to its default, simultaneously hold down the Command key and click on the slider.

Using a graph



Dragging one of the boxes in the graph (as shown above) changes the value of the corresponding parameter. In Windows, simultaneously hold down the <Ctrl> key and click on the box to reset the corresponding value to the default setting. To reset the entire graph and its values to the default setting, simultaneously hold down the <Ctrl> key and click on any section in the graph (other than one of the boxes) to reset the entire graph and its values to the default setting. On the Mac, simultaneously hold down the Command key and click on the box to reset the corresponding value to the default setting. To reset the entire graph and its values to the default setting, simultaneously hold down the Command key and click on the box to reset the corresponding value to the default setting. To reset the entire graph and its values to the default setting, simultaneously hold down the Command key and click on any section in the graph (other than one of the boxes) to reset the entire graph (other than one of the boxes) to reset the entire graph and its values to the default setting.

Menu

[File] menu



New

Creates and opens a new file containing the default Mixing setup and Voice data.

Open...

Opens an already saved file of the MOX6/MOX8 Editor VST.

NOTICE

Unlike files of other applications such as word processors, only a single file can be opened and edited on the MOX6/MOX8 Editor VST. Before opening a new file, make sure to save the edited settings as a file to avoid losing data.

Save

Saves the current settings by overwriting the current file.

Save As...

Saves the current settings as a MOX6/MOX8 Editor file (.X4E) under a new or different name.

Import

Imports the Voice data from another MOX6/MOX8 Editor VST file (.X4E) to the current file.

Click the File Select button (3), select a file including your desired Voice(s) so that the folders in the selected file are listed as the Source Voice list (3), select a Voice or Voices or a folder or folders in the list (3), select a destination location in the Destination Voice list (9) of the current file, then click [Import] (5) to execute the Import operation.





[1] [X] (Close) button

Click this to close this window without importing.



2 File name (Indication only)

Indicates the currently selected file.



File selection button

Click this to open the dialog for file selection.

[Category]/[Bank] checkboxes

Click either of these boxes to determine whether the Voices in the Source Voice list (3) are divided into Categories or Banks.

[Import] button

Click this to actually import the Voice(s) selected in the Source Voice list (3) to the specified location in the Destination Voice list (9).

DIVITE You can also import Voice data without the use of this button by dragging the desired Voice or folder from the Source Voice list then dropping it to the Destination Voice list.

DIVITE A Normal Voice cannot be imported to the User Drum Voice Bank. Likewise, a Drum Voice cannot be imported to the User Normal Voice Bank. No Voices can be imported to the Preset Voice Bank.

6 [+]/[-] buttons

Click the [+] button to open all the folders so that all Voices appear in all folders. Click the [-] button to close all folders.

Folder button (Bank or Category)

Double click here to open or close the folder.

Source Voice list

Indicates the Voices or folders of the selected file to be imported.

By right-clicking (Windows) / <control> key + clicking (Mac) this section and selecting a menu, you can perform the following functions.

- · Opening/Closing all the folders
- Determining whether the Voices listed here are divided into Category folders or Bank folders



Destination Voice list

Indicates the Voices or folders currently edited on the MOX6/MOX8 Editor VST.

DIVITE By right-clicking (Windows) / <control> key + clicking (Mac) this section and selecting a menu, you can open or close all the folders.

Search box

You can search for your desired Voice from the Source Voice list (3) by inputting a keyword here.
Setup

Determines the basic setup of the MOX6/MOX8 Editor VST. After setting necessary parameters, click [OK] to actually apply the settings to the MOX6/MOX8 Editor VST.



[X] (Close) button

Click this to close this window without applying the settings. This button is the same as the [Cancel] button (3).

2 [Detail] button

You can make detailed settings for the Input Port and Output Port by setting this button to "On." This setting is necessary if the Port name is changed on a computer.

3 MIDI

Set the MIDI Port for communication between the MOX6/MOX8 Editor VST and the MOX6/MOX8 instrument. When the [Detail] button (2) is set to "Off," select a value such as "Yamaha USB 0" or "MOX6/MOX8" at the top left column. When the [Detail] button (2) is set to "On," select Port 4 for the MIDI In setting, then select Port 1 and Port 4 for the MIDI Out settings.

When "!" is shown at left of the Port name (e.g., "! Yamaha USB IN 0"), this indicates that the previously used Port cannot be found or some Ports are not set properly. Check the MIDI Port settings in the Cubase series.

- **DNOTE** Keep in mind that setup on the Cubase series is necessary before making settings here.
- Moxe sure to set the MIDI IN/OUT parameter to "USB" in the MIDI display of the Utility mode on the MOX6/ MOX8 instrument.

Oevice No.

Set the Device number to the same as the value specified in the MIDI display of the Utility mode on the MOX6/MOX8 itself. When the Device number on the MOX6/MOX8 is set to "All," set the Device No. here to "1."

6 Auto Sync Setting

This section lets you set how the data synchronization between the MOX6/MOX8 Editor VST and the MOX6/MOX8 instrument is executed when "OFFLINE" is changed to "ONLINE." Actual data synchronization is executed from the Auto Sync window (page 50) called up automatically under certain circumstances such as clicking the [OFFLINE] button, starting the MOX6/MOX8 Editor VST and opening a new file on the Editor.

Global

Determines whether or not the Global data (see page 3) is synchronized and which data (MOX6/MOX8 Editor VST or MOX6/MOX8 itself) is synchronized with the other.

Current

Determines whether or not the Current data (see page 3) is synchronized and which data (MOX6/MOX8 Editor VST or MOX6/MOX8 itself) is synchronized with the other.

Voice

Determines whether or not the Voice data (see page 3) is synchronized and which data (MOX6/MOX8 Editor VST or MOX6/MOX8 itself) is synchronized with the other.

Auto Start

When this is set to "On" and one of the following operations is executed, data synchronization will be started automatically as soon as the Auto Sync window is opened.

- When clicking "OFFLINE" after setting the MIDI IN/OUT parameter correctly in the Utility mode on the MOX6/ MOX8, setting the MIDI Ports correctly on the computer, and making a proper connection.
- When the connection between the MOX6/MOX8 and a computer are corrected after appropriately correcting the setup of the MOX6/MOX8 and the computer.
- When the settings on the MOX6/MOX8 instrument and the computer are corrected after appropriately reconnecting the devices.
- When the settings on the MOX6/MOX8 instrument and the computer are corrected after appropriately launching the MOX6/MOX8 Editor VST.

DINOTE The parameters set here apply also to the parameters having the same names in the Auto Sync window.

NOTICE

When the Auto Start parameter is set to "On," data synchronization is started automatically under certain circumstances (page 50) such as clicking the [OFFLINE] button, starting the Editor and opening a new file on the Editor. Keep in mind that this will cause unexpected data loss on the MOX6/MOX8 Editor VST or the MOX6/MOX8 itself, since new data automatically overwrites old data upon data synchronization. Make sure to save your important data before using the MOX6/MOX8 Editor VST.

6 Knob Guide

Determines whether or not the Knob Guide (knob editing area) appears when adjusting a knob. Setting this to On conveniently enlarges the knob editing area (as shown), making it much easier to edit a knob's parameter.



Knob Guide: On



Knob Guide: Off

Knob Mouse Control

Determines how the knob illustrated at right responds to your mouse control.



Circular

When this is selected, you can jump to a specific value by clicking at a point within the Knob editing area. You can edit the value also by dragging the mouse in a circular direction—in much the same way as turning an actual knob.

Relative Circular

When this is selected, you can edit the value by dragging the mouse in a circular direction—in much the same way as turning an actual knob.

Linear

When this is selected, you can edit the value by dragging any point in the knob editing area (the mouse pointer disappears) and moving it vertically or horizontally—in much the same way as operating a slider.



8 Slider Mouse Control

Determines how the Slider illustrated at right responds to your mouse control.



Jump

When this is selected, clicking any location in the slider jumps the slider pointer to that location.

Touch

When this is selected, you can edit the value by dragging and moving the slider pointer horizontally-in much the same way as operating an actual slider. Clicking at any location in the slider (other than the orange pointers) does not affect the slider.

Ramp

When this is selected, clicking at any location in the slider (other than the orange pointers) moves the nearest pointer to that location. Dragging any point in the slider moves the slider pointer accordingly.

Relative

When this is selected, you can edit the value by dragging any point (the mouse pointer disappears) and moving it horizontally.

Seyboard Velocity

Determines the Velocity value generated when clicking any note on the virtual keyboard at the bottom of the Editor window. When "Fix" is turned on, clicking any key generates the same velocity value which can be specified in the box at right of "Fix." When "Free" is turned on, the generated Velocity value differs depending on the click location. The lower on the key graphic you click, the higher the Velocity.

Inc/Dec Action

Determines how the triangular buttons ($[\blacktriangle]/[\nabla]/[\Lambda]/[V]$) located at the parameter boxes as illustrated below work.



Inc/Inc:

When this is selected, clicking the $[\blacktriangle]$ button increases the value by 1 while clicking the $[\Lambda]$ button moves the cursor downward by one item.

Inc/Dec:

When this is selected, clicking the $[\blacktriangle]$ button increases the value by 1 while clicking the $[\Lambda]$ button moves the cursor upward by one item.

Dec/Inc:

When this is selected, clicking the $[\blacktriangle]$ button decreases the value by 1 while clicking the $[\Lambda]$ button moves the cursor downward by one item.

Dec/Dec:

When this is selected, clicking the $[\blacktriangle]$ button decreases the value by 1 while clicking the $[\Lambda]$ button moves the cursor upward by one item.

Startup Mode

This section lets you set the startup mode when launching the MOX6/MOX8 Editor VST.

Voice

The editor will start in the Voice mode.

Pattern

The editor will start in the Pattern mode.

Song

The editor will start in the Song mode.

ENOTE Launching the MOX6/MOX8 Editor VST from an instrument track will set the MOX6/MOX8 to the Voice mode.

Launching the MOX6/MOX8 Editor VST from the Media Bay will set the MOX6/MOX8 to the mode specified in the selected VST Preset.

[OK] button

Click this to actually apply the settings to the MOX6/MOX8 Editor VST and close the Setup window.

[Cancel] button

Click this to close the Setup window without applying the settings to the MOX6/MOX8 Editor VST.

Hardware Utility

From the HARDWARE UTILITY window called up by selecting this menu, you can make the settings related to the parameters in the Utility mode of the MOX6/MOX8. Editing the parameter on this window will affect the parameter having the same name of the MOX6/MOX8 instrument. After making the settings, click [Store] at the bottom of this window to store the settings as Global data.

×	HARDWARE UTILI	ΙΤΥ			
	Tone Note Shift		Auto Load Setup Power On Mode		
		+0.0 - 440.0Hz	master		
	MIDI Channel _	MIDI Sync	MIDI Switch		MIDI Other
	Basic Receiv	ve Ch MIDI Sync	Bank Select	Local Control	Controller Reset
	1 🗘	internal 🌩	On	On	reset 🗢
	Basic Trans	smit Ch Clock Out	Program Change		
	1 t	Da			
			Store — Store Global		

VSTi Setup

This determines the setup of the audio routing from the MOX6/MOX8 instrument to the Cubase series via the VSTi Setup window in the menu of the MOX6/MOX8 Editor VST.

Click the [AUTO] button to set all the audio ports automatically when connecting the MOX6/MOX8 instrument to the computer via USB cable. All connections of the audio ports will be cleared when clicking the [Clear] button.

Select the audio ports of the audio interface to which the MOX6/MOX8 instrument is connected when using the audio interface to connect a computer.



Example of VSTi Setup for USB Connection

This section describes a setup example in which the audio signal is transmitted via USB between the MOX6/ MOX8 and the computer.

In the following example, two audio channels are reserved for the stereo part (indicated by PART) of the MOX6/MOX8, the other two channels are for the stereo A/D input part, and all four of those channels are input to Cubase.

1. On the MOX6/MOX8, set the Mode parameter to "VST" on the [UTILITY] \rightarrow [F5] USB I/O display.

To confirm the audio signal configuration created via this operation, press the [SF6] to call up the INFORMATION window. You can see there that USB audio channels 1 and 2 are used for the A/D IN while USB audio channels 3 and 4 are used for the stereo part of the MOX6/MOX8.



2. On the VSTi Setup display of the Editor VST, set how the audio signal is input from the MOX6/MOX8 to the Cubase Mixer.

Yamaha MOX6/MOX8-1 to 4 in the VSTi Setup display corresponds to USB 1 to 4 on the INFORMATION window of the MOX6/MOX8.

In the following example, only the PART audio (USB 3 and 4) are input to the Cubase mixer and A/D IN (USB 1 and 2) are not input.

UTILITY USB I/O INFORMATION window of MOX6/MOX8



[Edit] menu

Edit	Bulk	Help	
	Undo		Ctrl+Z
	Redo		Ctrl+V
	Сору		Ctri+C
	Paste		Ctrl+V
	Initialize	Current Voice	Del
Store Global			
	Store Vo	ice	
	Voice Cor	moare	Ctrl+P

Edit Bulk Help	
Undo	Ctrl+Z
Redo	Ctrl+Y
Сору	Ctri+C
Paste	Ctrl+V
Initialize Current Mixing	Ctrl+Del
Initialize Current Part Voice	Del
Store Global	
Store Mixing	
Store Voice	
Mixing Compare	Ctrl+M
Voice Compare	Ctrl+P

Song or Pattern mode

Undo

Cancels the changes you made in your most recent editing. [Undo] menu cannot be selected depending on the most recent edited parameter.

Redo

Redo is available only after using Undo, and lets you restore the changes you made before undoing them.

Сору

Copies the selected items such as characters of the Voice name in the text box, Voice(s) in the VOICE LIBRARY window and entire Part setup to the clipboard.

Paste

Pastes the Voice(s), entire Part setup, and characters from the clipboard to the specified location.

Initialize Current Voice (in the Voice mode)/Initialize Current Part Voice (in the Song or Pattern mode)

In the Voice mode, select [Initialize Current Voice] under [Edit] to call up the Initialize Current Voice window from which you can initialize the current Voice by clicking [Start]. In the Song or Pattern mode, select [Initialize Current Part Voice] under [Edit] to call up the Initialize Current Part Voice window from which you can initialize the Voice assigned to the current Part by clicking [Start].

When a Normal Voice is edited:



When a Drum Voice is edited:



[X] (Close) button

Click this to close the window without executing Initialization.

2 [All]/[Clear] button

Clicking [All] turns all the checkboxes in this window on while clicking [Clear] turns them off.

③ [Common] checkbox

When this is turned on, clicking [Start] initializes the settings of all the Common parameters (Voice Common parameters when the Editor is set to the Voice mode or Part Common parameters when the Editor is set to the Song or Pattern mode).

4 with Wave Assignment

When this is turned on, clicking [Start] initializes the Waveform assignment for all Elements of the current Voice.

5 Element [1] – [8] or Drum Key C0 – C6 checkboxes

When a Normal Voice is edited, clicking [Start] initializes the settings of all parameters for the Elements which are turned on here. When a Drum Voice is edited, clicking [Start] initializes the settings of all parameters for the drum keys which are turned on here.

6 [Start] button

After the setup is completed, click [Start] to initialize the parameter settings and close the window.

Initialize Current Mixing (only in the Song or Pattern mode)

Select this menu to call up the Initialize Current Part Voice window, set the parameters as necessary, then click [Start] to initialize the Voice data assigned to the current Part.





1 [X] (Close) button

Click this to close the window without executing Initialization.

[All]/[Clear] button

Clicking [All] turns all the checkboxes in this window on while clicking [Clear] turns them off.

③ [Multi Common] checkbox

When this is turned on, clicking [Start] initializes the settings of all the Multi Common parameters.

Initialize Template

The following templates for initializing are available.

Normal:

When this is selected, clicking [Start] initializes the Editor setup to the normal default settings.

GM:

When this is selected, clicking [Start] initializes the Editor Setup so that the MOX6/MOX8 can be used as a GM tone generator.

9 Part [1] – [16] checkboxes

Clicking [Start] initializes the settings of all parameters for the Parts which are turned on here.

6 [AD] checkbox

When this is turned on, clicking [Start] initializes the settings of all parameters for the AD Part.

[Start] button

After setup is completed, click [Start] to initialize the Mixing setup and close the window.

Store Global

Simply selecting this menu will store the Global settings. The Global settings will be stored only to the internal memory of the MOX6/MOX8 instrument.

Store Voice

From the window selected via this menu, you can store the edited Voice. The current Voice is stored in the Voice mode while the Voice assigned to the current Part is stored in the Song or Pattern mode. Select the desired Bank folder (⑤), select the number of the destination Voice (⑥), input the Voice name (②), then click the [Store] button to store the Voice as a User Voice or Mixing Voice (available only in the Song or Pattern mode).



1 [X] (Close) button

Click this to close this window without executing the Store operation.

2 Voice Name

Enter an original name for the Voice to be stored.

3 [Store] button

Click this to store the edited Voice to the specified Bank and number.

NOTICE

Like other parameters, the Voice data is synchronized with the MOX6/MOX8 instrument when ONLINE (page 13) is indicated. This means that clicking [Store] in this window stores the edited Voice to the corresponding Bank in the internal memory of the MOX6/MOX8 instrument. Be careful not to overwrite any important data.

④ [+]/[−] buttons

Pressing the [+] button opens all the Bank folders, while pressing the [-] button closes them.

Bank folder

This section indicates the following Banks to which you can store the edited Voice.

- Normal User 1
- Normal User 2
- Normal User 3
- Drum User
- Mixing

Clicking on each Bank folder opens it and all the Voices stored in the Bank appear as illustrated above (from the left illustration to the right one). When clicking the Bank folder again, it closes as illustrated above (from the right illustration to the left one).

Note that the indicated Bank differs depending on the current mode and current Voice type. The Mixing Bank is shown only in the Song or Pattern mode. The Drum User Bank is shown only when the Drum Voice is selected (in the Voice mode) or the Drum Voice is assigned to the current Part (in the Song or Pattern mode). Likewise, the Normal User Bank and Mixing Bank are shown only when the Normal Voice is selected (in the Voice mode) or the Normal Voice is assigned to the current Part (in the Song or Pattern mode).

6 Voices

The Voices in the selected Bank are listed. Before clicking the [Store] button, you need to select the number of the destination Voice here. Right-clicking (Windows) / <control> key + clicking (Mac) on this section calls up the menus "All Open" and "All Close," letting you open or close all the Bank folders.

Store Mixing (only in the Song or Pattern mode)

Simply selecting this menu will store the Mixing settings in the Song or Pattern mode. The Mixing settings will be stored to the internal memory (overwritten to the Mixing setup of the currently selected Song or Pattern) of the MOX6/MOX8 instrument.

Voice Compare

This menu lets you switch between the just-edited Voice and its original, unedited condition, allowing you to hear how your edits affect the sound. Select "Voice Compare" to enter the Voice Compare mode. In this mode, you can hear the sound of the original Voice and none of the parameters in the window can be edited. Select "Voice Compare" again to return to the original status.

The status of the MOX6/MOX8 instrument is maintained even if you enable the Voice Compare mode on the MOX6/ MOX8 Editor VST.

Mixing Compare (only in the Song or Pattern mode)

This menu lets you switch between the just-edited Mixing and its original, unedited condition, allowing you to hear how your edits affect the sound. Select "Mixing Compare" to enter the Mixing Compare mode. In this mode, you can hear the sound of the original Mixing setup and none of the parameters in the window can be edited. Select "Mixing Compare" again to return to the original status.

The status of the MOX6/MOX8 instrument is maintained even if you enable the Mixing Compare mode on the MOX6/ MOX8 Editor VST.

[Bulk] menu



Data Sync

Select this menu to call up the Initialize Data Sync window, set the parameters as necessary, then click [Start] to transmit the specified data from/to the MOX6/MOX8 Editor VST to/from the MOX6/MOX8 instrument.

Data Sunc 2 Transmit 🖳 💷 📰 Receive 📄 📰	3 -Current Global -Preset Normal User Drum User (Favorites) 1 2 3	
(4)	Start 6	

[X] (Close) button

Click this to close this window without executing Data Sync.

[Transmit]/[Receive] checkboxes

Determines whether the MOX6/MOX8 Editor VST transmits data to the MOX6/MOX8 or receives data from the MOX6/MOX8.

[Transmit] checkbox:

When this is checked, clicking [Start] button transmits data from the Editor to the instrument.

[Receive] checkbox:

When this is checked, clicking [Start] button transmits data from the instrument to the Editor.

3 Data type to be transmitted/received

Here, you can set which data type is to be transmitted or received. Clicking the [All] button turns all the data types on while clicking the [Clear] button turns all the data types off.

Current

Turn this on then click the [Start] button to transmit or receive the Current settings.

Global

Turn this on then click the [Start] button to transmit or receive the Global settings.

Preset (Favorites)

Turn this on then click the [Start] button to transmit or receive the Favorites-related settings of the Preset Voice(s).

Normal User 1 – 3

Turn this on then click the [Start] button to transmit or receive the data of the Normal User Voice Bank 1, 2, 3 respectively.

Drum User

Turn this on then click the [Start] button to transmit or receive the data of the Drum User Voice Bank.

Progress Bar

Shows how much of the data has been transmitted.

[Start] button

After setup is completed, click the [Start] button to actually execute data transmission.

6 [Stop] button

This button is available only when data transmission is being executed and allows you to cancel the transmission.

[Help] menu



Manual

Selecting this menu calls up this manual in PDF format.

About

Selecting this menu calls up information such as the version number of the MOX6/MOX8 Editor VST.

Auto Sync window

This window is used for changing the status of the Editor from "OFFLINE" to "ONLINE." While editing a parameter on the Editor affects the same parameter on the MOX6/MOX8 instrument and vice versa in the Online status, you can disable the "mirroring" of parameter changes between the devices by switching to Offline status. The Auto Sync window can be called up by clicking "OFFLINE" on the Editor window when the Editor is in the Offline status. The Auto Sync window can also be called up automatically (without clicking "OFFLINE") under the following circumstances:

- When opening a file.
- When creating a new file by selecting "New" under the File menu.
- When changing the mode on the Editor in the Online status of the Editor.
- When changing the mode on the MOX6/MOX8 instrument in the Online status of the Editor.
- When the connection between the MOX6/MOX8 and a computer are corrected after appropriately correcting the setup of the MOX6/MOX8 and the computer.
- When the settings on the MOX6/MOX8 instrument and the computer are corrected after appropriately reconnecting the devices.

On the Auto Sync window, set the Data Port properly then click [Start] button to execute data synchronization. As soon as the data synchronization is completed, the Auto Sync window is closed then the OFFLINE indication changes to ONLINE automatically.



[X] (Close) button

Click this to close this window without executing data synchronization.



- Ort
- Device No.

6 Auto Sync Setting

These parameters are same as in the Setup window. See page 37.



8 [Stop] button

These parameters are same as in the Data Sync window. See page 49.

DNOTE If the Auto Start parameter is set to "On" in the Auto Sync window, data synchronization may be started automatically as soon as the Auto Sync window is opened in certain conditions. For details, see page 38.

Tips

Recording to Cubase MIDI tracks with the MOX6/MOX8 Editor VST

The following instructions show you how to record to Cubase MIDI tracks with the MOX6/MOX8 Editor VST.

1. Create a MIDI track and start the MOX6/MOX8 Editor VST in Cubase by executing the steps on pages 4 - 5.

On the Editor VST, set the mode to "Song" or "Pattern."



2. Make the settings for recording.

On the MOX6/MOX8:

Create a Quick Setup including the following settings on the MOX6/MOX8, then select the created Quick Setup.

The Quick Setup can be selected from the Editor VST as well as on the MOX6/MOX8 itself.

MIDI	Local Ctrl	off
	MIDI Sync	auto (Enables MOX6/MOX8 playback to be synchronized with Cubase.)
	Clock Out	off
	ArpOutSw	all off (Disables MIDI output of Arpeggio playback data from MOX6/MOX8.)
AUDIO	Mode	VST
	Direct MonitorSw Part	on (Enables you to monitor the MOX6/MOX8 sound directly.)

- Local Control should be set to "off" to prevent a "double" sound from both the MOX6/MOX8 keyboard and Cubase. This is because Cubase receives MIDI data from the MOX6/MOX8, then "echoes" (sends it as is) back to the MOX6/MOX8 (page 55).
 - The Direct MonitorSw Part should be set to "on" so that you can monitor the recording sound without latency (page 55).

On Cubase:

Set the Instrument channel of the Editor VST to "mute on" so that you monitor the sound directly.

On the Editor VST:

Select a Voice for the Recording Part.

When the Editor VST is set to "Song" or "Pattern," the Part which is connected to the current Editor VST track (MIDI track) of Cubase will be automatically selected on the Editor VST. For example, when you select the Cubase MIDI track which is connected to Part 1 of the MOX6/MOX8, Part 1 is automatically selected on the MOX6/MOX8 Editor VST.

3. Start recording to the Cubase MIDI track.

For details about this operation, see the Cubase manual. Simply play the MOX6/MOX8 following the Cubase tempo click or the sound of another audio track.

IMPORTANT

If you want to monitor the already recorded MOX6/MOX8 Editor VST track (MIDI track) on recording, it is recommended to convert the MIDI track data to audio data beforehand. If you do not so, playback of your recorded performance may not be synchronized with playback of the MOX6/MOX8 Editor VST track.



Tips

4. Play back the recorded data.

Make the following settings then listen to the playback sound through the Cubase mixer.

MOX6/MOX8 Instrument

Direct MonitorSW Part: off

Cubase Mixer

MOX6/MOX8 Editor VST instrument channel: mute off

You can enhance the sound by applying EQ or effects to the Editor VST track (MIDI track). For detailed instructions, refer to the Cubase manual.

5. Convert the recorded MIDI track to audio data.

On Cubase, select [File] \rightarrow [Export] \rightarrow [Audio Mixdown] to convert the recorded MIDI data to audio data. For details, see Cubase manual.

6. Create an additional MIDI track for Editor VST.

On Cubase, select [Project] \rightarrow [Add Track] \rightarrow [MIDI] to add the MIDI track. Set the Input routing of the track to "All MIDI Inputs" and Output to "MOX6/ MOX8 VST." You can record additional tracks by repeating steps 2 to 6 above.

7. Save the Cubase Project.

On Cubase, select [File] \rightarrow [Save] or [Save As...] to save the Cubase Project.



Recording/Editing Arpeggio playback as MIDI data on Cubase

If you set the Arpeggio to "on" on the Editor VST in step 2 on page 51, you can record your performance including the Arpeggio playback as audio. If you only want to record Arpeggio playback as audio data, then follow the previous instructions. However, if you want to edit the MIDI events of the recorded Arpeggio, follow the instructions here below.

Create a MIDI track and start the MOX6/MOX8 Editor VST in Cubase by executing the steps on pages 4 – 5.

On the Editor VST, set the mode to "Song" or "Pattern."

2. Make the settings for recording.

On the MOX6/MOX8:

Create a Quick Setup including the following settings on the MOX6/MOX8, then select the created Quick Setup.

The Quick Setup can be selected from the Editor VST as well as on the MOX6/MOX8 itself.

MIDI	Local Ctrl	on
	MIDI Sync	auto
	Clock Out	off
	ArpOutSw	all on (Enables MIDI output of Arpeggio playback data from the MOX6/ MOX8)
	TrExtSw	When the Key Mode is set to other than "direct," "sortdirect," or "thrudirect": all off (Disables MIDI output of played notes)
		When the Key Mode is set to "direct," "sortdirect," or "thrudirect": all on (Enables MIDI output of played notes)
AUDIO	Mode	VST
	Direct MonitorSw Part	on (Enables you to monitor the MOX6/MOX8 sound directly.)

- The above settings are for the Song or Pattern mode. If you want to record in the Voice mode, the following settings are necessary.
 - "KBD TxCh=off" instead of "TrExtSw=all off"
 - "KBD TxCH=1" instead of "TrExtSw=all on"

On the Editor VST:

For the Recording Part, select a Voice and Arpeggio Type, then set Arpeggio to on.

	■ ARPEGGID	M
	MAIN:Common Parameters	
Part Common	Hold Velocity Limit Note Limit	
General ARP RCV/Control Set LF0	Tempo 128 Change Timing Measure Velocity Mode original Sort	Output Octave Shift
Element	Voice With ARP ARP On/ Off Value	ncQuantize ue off
I - Oscillator/Pitch	Individual ARP Parameters	
Filter	ARP 1 ARP 2 ARP 3 ARP 4 ARP	5 ARP 6
Type/FEG	Bank Category Sub Number Name	
Scale	>Preset >ApKb >Genrl >615 >MA_Pf Arp1	
Amplitude	Rate Offset Velocity Gate Time +8% +9%	
Scale		
	DTHER:Common Parameters	
	Rate Velocity Gate Time Unit Multiply 180% Value ▲ 128 ♦ 0%	Şwing +Ø
	Accent Vel Threshold Start gate yel Offset Key On	Octave Range
	Random SFX +8 Control ARP Play Only SW MIDI Out	¢

When the Editor VST is set to "Song" or "Pattern," the Part which is connected to the current Editor VST track (MIDI track) of Cubase will be automatically selected on the Editor VST. For example, when you select the Cubase MIDI track which is connected to Part 1 of the MOX6/MOX8, Part 1 is automatically selected on the MOX6/MOX8 Editor VST.

On Cubase:

Set the Instrument channel of the Editor VST to "mute on" so that you can monitor the sound directly.

Set the Output routing of the MIDI track to "Not Connected" so that the MIDI data from MOX6/MOX8 instrument would not echo back.

IMPORTANT

When the ArpOutSw is set to "all on" in Quick Setup, make sure to set the Output routing of the MIDI track to "Not Connected" before playing the MOX6/MOX8 keyboard. This is very important—if you fail to do so, Arpeggio playback data will be echoed back from Cubase to the MOX6/MOX8 in an endless loop, generating excessive amounts of data, and causing operation of Cubase and the Editor to almost completely freeze.

However, keep in mind that this should be set to "Connected" while operating the Editor VST window, since otherwise the Editor settings will not be correctly applied to the MOX6/MOX8.



3. Start recording to the Cubase MIDI track.

For details about this operation, see the Cubase manual. Simply play the MOX6/MOX8 following the Cubase tempo click or the sound of another audio track.

IMPORTANT

If you want to monitor the already recorded MOX6/MOX8 Editor VST track (MIDI track) during recording, you should convert the MIDI track data to audio data beforehand. Otherwise, playback of your recorded performance may not be synchronized with playback of the MOX6/MOX8 Editor VST track.

4. Play back the recorded data.

Make the following settings then listen to the playback sound through the Cubase mixer. You can enhance the sound by applying EQ or effects to the Editor VST track (MIDI track). For detailed instructions, refer to the Cubase manual.

On Cubase:

Set the MOX6/MOX8 Editor VST instrument channel to "mute off." Set the Output Routing of the Editor VST track (MIDI track) to "1-MOX6/MOX8 VST."

On the MOX6/MOX8:

Select the Quick Setup including the following settings on the MOX6/MOX8 or from the Editor VST.

Local Ctrl	off
Direct MonitorSw Part	off
ArpOutSw	all off

On the Editor VST:

Set Arpeggio to "off."

- When operating the Editor VST window, make sure to set the Output Routing of the Editor VST track (MIDI track) to "Connected" on Cubase. Otherwise, the settings on the Editor VST will not be applied to the MOX6/ MOX8.
- Depending on the Arpeggio Type, different sound may be monitored compared with the one that you monitored in step 3. In such a case occurs, edit the MIDI events as described in step 5.

5. Edit the MIDI events of the recorded Arpeggio.

On Cubase, select the MIDI track including the recorded events, then select [MIDI] \rightarrow [Open Key Editor] from the menu to call up the Key Editor window. On this window, edit the MIDI events of Arpeggio playback. For details about the Key Editor window, see the Cubase manual.





Monitoring the instrument sound

When recording to Cubase, there are two methods of monitoring: Direct Monitor "on" and "off." This Direct Monitor parameter can be set on the [UTILITY] \rightarrow [F5] USB I/O display or by selecting the Quick Setup on the MOX6/MOX8. For details, see the Owner's Manual of the MOX6/MOX8.

Direct Monitor on

With the Direct Monitor on, you can monitor the instrument sound directly from the instrument without latency.



Direct Monitor off

With the Direct Monitor off, you can monitor the sound transmitted to the computer and returned back to the instrument. This method lets you monitor the sound to which the volume level/effect/EQ parameters have been applied on the Cubase mixer.



Troubleshooting

If you encounter problems such as no sound output or abnormal behavior, verify the connections before checking the following.

Sound does not change when using the knobs or sliders.

- Is "ONLINE" indicated on the Editor window?
- Is the lamp at left of "ONLINE" indicator turned on? If it is turned off, the settings related to communication between the MOX6/MOX8 and a computer may be wrong. Check the MIDI Port setting (page 37) on the MOX6/MOX8 Editor VST, the MIDI IN/OUT parameter setting in the MIDI display of the Utility mode on the MOX6/MOX8 instrument, or the cable connection between the MOX6/MOX8 and the computer.
- Check the MIDI Port setting and Device No. setting (page 37).

Bulk data is not transmitted/received successfully.

• Check the same points as above such as "ONLINE" indication and MIDI Port settings.

The appropriate Port is not shown in the Setup window.

- The MIDI Port in the Setup window can be selected from the Ports specified in the Cubase series. Check the MIDI Port settings in the Cubase series.
- When "!" is shown at left of the Port name (e.g., "! Yamaha USB IN 0-1"), this indicates that the previously used Port cannot be found or some Ports are not set properly. Check the MIDI Port settings in the Cubase series.

The sounds of the MOX6/MOX8 do not come to the Audio Mixer in the Cubase series.

• Set up the audio ports connected the MOX6/MOX8 in the VSTi Setup window (page 41).

The current audio ports do not appear when clicking the [AUTO] button in the VSTi Setup window.

 Make sure to put checkmarks to the "Display" for the current audio ports in the "Devices" menu → "Device Setup" → "VST audio system" in the Cubase series.

Cannot be set to ONLINE or "Port Open Error" is shown.

- Check whether or not the MOX6/MOX8 is connected to the computer properly, and check whether or not the power of the MOX6/MOX8 is turned on.
- On Windows, quit any application software which may be using the MOX6/MOX8 Port. If the application software closes unexpectedly without user input, restart the computer.

"Time Out Error" or "Communication Time Out Error" is shown.

This message appears when the computer cannot get the response from the MOX6/MOX8 and another error occurs. Check whether or not the Receive Bulk parameter and the MIDI In/Out parameter of the MOX6/MOX8 are set properly in the Utility display called up via [UTILITY] → [F6] → [SF2] RcvBulk or [UTILITY] → [F6] → [SF4] MIDI IN/OUT.

The MOX6/MOX8 Editor VST may be revised and updated without prior notice. For details and the latest information on the Editor, refer to the following URL: http://www.yamahasynth.com/downloads/