

CSP-150/170

PROGRAM INSTALLATION GUIDE

● PREPARATION


1. Use the USB memory that has more than the install data file size.
2. Copy the install data file to the root of the USB memory.

model	Install data file
CSP-150	CSP-150SETUP.PRG
CSP-170	CSP-170SETUP.PRG


● INSTALLATION PROCEDURE

[Note] Do not turn the power off and do not remove the media during the installation.


1. Turn the power switch on with holding down [FUNCTION] switch.
 - The Stream Lights of the B \flat -1 key light continuously.

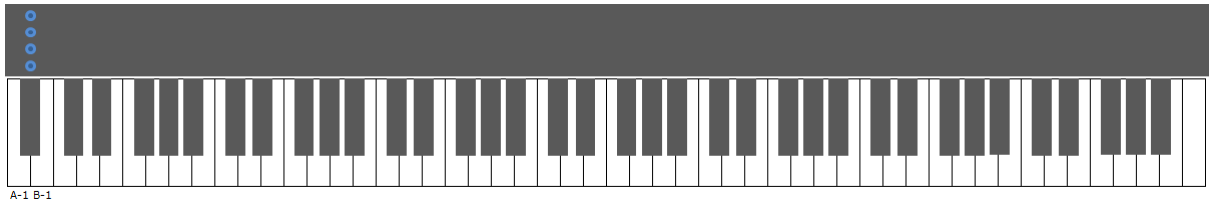

2. Insert the USB memory including the install data to the USB to DEVICE terminal.

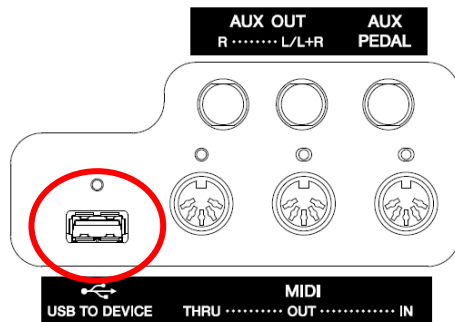


- The Stream Lights of the B \flat -1 key flash in succession in a downward pattern.

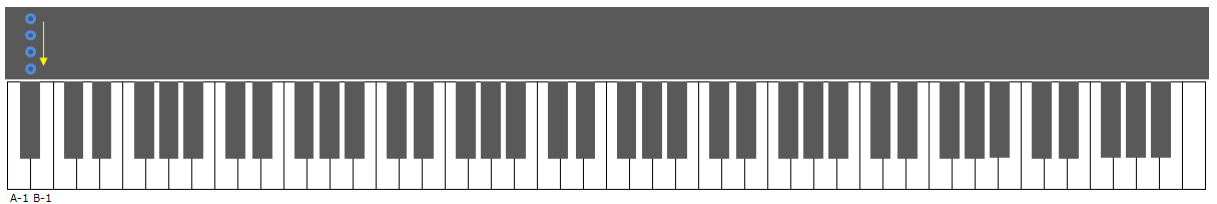


3. When the preparation of installation has been completed, it will see the following screen is displayed.


- The Stream Lights of the A-1, B-1 keys light continuously.

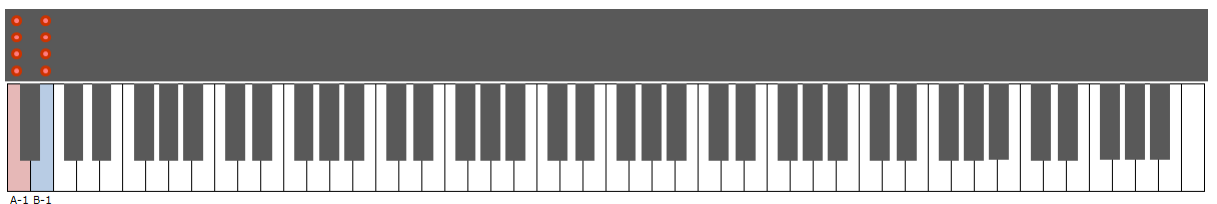

4. Press the [FUNCTION] switch or the B-1 key, then start program upgrading.
 - the progress display will appear.

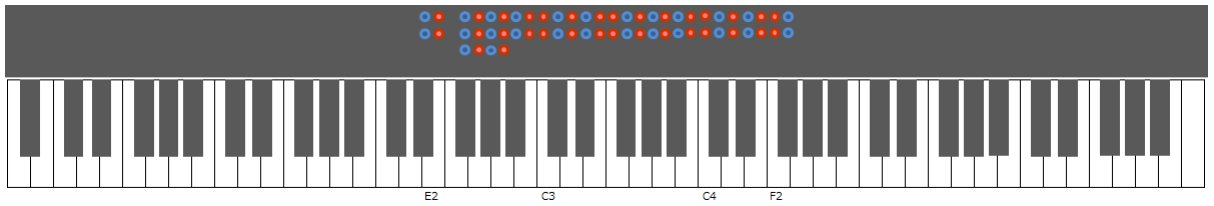

5. When the installation has been completed, it will see the following screen is displayed.
 - D#2, E2 keys LED and F#2 ~F#4 keys will stream lights up.

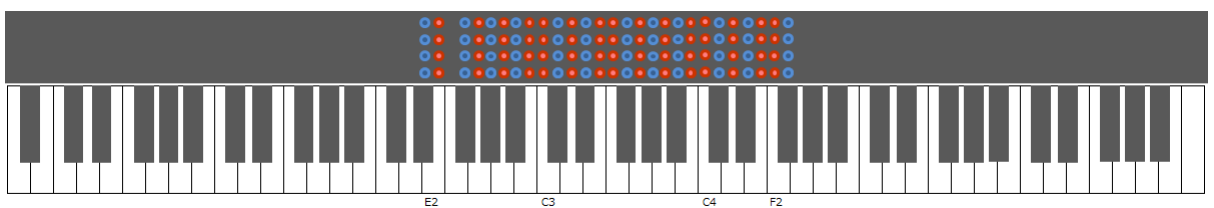


6. Power off the instrument.

● TROUBLESHOOTING

If an error occurs, it will see the following screen is displayed.

- The Stream Lights of the A-1 key light continuously.

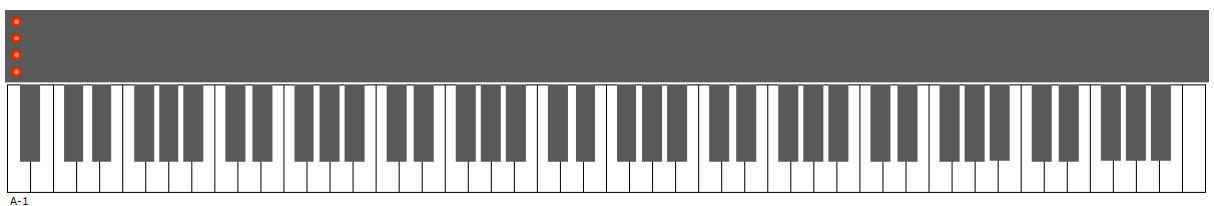

You need to reinstall the program. Go back to the beginning and follow the instruction again.