

Previous SWX2322P Firmware **version information**

V2.06.17

Feature Additions

- Support for ProAV Quick Setup
 - Added and updated the following commands:

ip igmp snooping fast-leave auto-assignment

ip igmp snooping check ra enable/disable

ip igmp snooping check tos enable/disable

ip igmp snooping report-forward enable/disable

ipv6 mld snooping report-suppression

show ip igmp snooping interface

show ipv6 mld snooping interface

proav profile-type

Specification Changes

- Default Configuration Updates
 - Added the following settings:

ip igmp snooping disable

ipv6 mld snooping disable

- Web GUI ProAV Menu Enhancements
 - Added a new ProAV profile screen.
 - Added a new multicast screen.
 - Updated the Web GUI's Dante optimization settings:
 - Reviewed commands applied during manual configuration.
 - When flow control is enabled, commands now disable this feature.
 - When LLDP is disabled, commands will now allow it.
 - Updated the Web GUI dashboard:
 - Added a bandwidth usage button to the interface gadget to display per-port usage.
 - Added new settings in Web GUI:
 - [Multicast] - [IGMP Snooping]
 - RA Check
 - ToS Check
 - Report Forwarding Feature
 - Automatic Fast Leave Assignment
 - [Multicast] - [MLD Snooping]
 - Report Suppression Feature
- Port Initial Layout Update
 - Changed the default port layout from Vertical to Horizontal.
 - Set the upper row as Dante Primary and the lower row as Secondary in a Horizontal layout.
 - Displays an error if the VLAN ID limit is exceeded:
 - "Profile cannot be set as the VLAN ID limit has been reached."

- Command Updates
 - Updated LAN/SFP port configurations:
 - Added, tlv-select basic-mgmt(LLDP).
 - Removed, spanning-tree enable/disable.
 - Removed the no spanning-tree command from the ProAV profile reset configurations.
- Initialization Specification Changes
 - Changed the "Reset to Default Settings" button in the Web GUI ProAV profile screen to restore factory settings.
 - Made the following adjustments:
 - System Initialization:
 - Replaced, "no lldp run" with "lldp run".
 - Added, "lldp auto-setting enable".
 - VLAN Interface Initialization:
 - Added, "l2-mcast flood 239.192.128.250".
 - Added, "ip igmp snooping disable" and "ipv6 mld snooping disable".
 - LAN/SFP Port Initialization:
 - Replaced, "no lldp-agent" with "lldp-agent".
 - Added, "no tlv-select basic-mgmt".
- Multicast Default Reset Update
 - Changed the "Reset to Default Settings" action for VLAN interfaces to restore factory settings.

Bug Fixes

- IGMP/MLD Snooping Setting Fix
 - Solved an issue where the following commands, when executed in "no" format, did not reflect changes:

ip igmp snooping version

ipv6 mld snooping version
- Dante Optimization Display Fix
 - Solved an issue where Dante optimization status was not displayed correctly in the RM-CR GUI.
- VLAN-ID Error Fix
 - Solved an error in the ProAV multicast settings screen when selecting profiles with VLAN IDs of 257 or higher.
- Toggle Button Height Alignment
 - Unified toggle button heights in the following ProAV settings screens:
 - Dante Primary/Secondary Connection Settings
 - CUSTOM Settings
- SDVoE Item Visibility Fix
 - Solved an issue where SDVoE items were not displayed on multi-speed devices in stack configurations.
- Menu Display Issue Fix
 - Solved an issue where menu items were not visible when the Web GUI language was set to English, and the browser window was resized.
- Error Message Update
 - Updated error messages in the Web GUI [ProAV Settings] - [Profile] when LAG member ports exist:

- "Remove the ports that belong to a logical interface from the logical interface."
- Unused Legend Display Fix
 - Solved an issue where unused legends were displayed in the Web GUI ProAV profile.