

No.	Patch Name	Description				Speaker Data	EXP Pedal	Style
011	True Brit	LEAD2		CHORUS	DELAY	British 4x12		British Anniversary stack
012	LA clean	CLEAN2			DELAY SPRING	British 4x12		Rich Clean Sound
013	Follow Me	DRIVE1	COMP		TAPE ECHO	Modern 4x12		Rock
021	Mellow Man	CLEAN1	COMP			American 1x12		Jazz
022	George Town	CRUNCH1	COMP	ROTARY	DELAY	YAMAHA 1x12		60's-style rhythm with rotary
023	Large Muff	LEAD1		CHORUS	DELAY HALL	Hybrid 2x12		Smooth Lead Sound
031	Space Ranger	LEAD2		PHASER	DELAY HALL			Experimental
032	Black Sunday	LEAD1		FLANGER		British 4x12		Heavy Metal
033	Funky Flange	CLEAN1	COMP	FLANGER	DELAY	Modern 1x12		Funk
111	Santa Ana	LEAD1				American 1x12		Rock/Fusion Fat Lead Sound
112	Van Hallo	LEAD2			DELAY	American 4x12		Heavy Metal
113	Punchy Drive	DRIVE1				American 1x12		Rock Blues
121	Gettin' It Rhythm	DRIVE2			DELAY	YAMAHA 1x12		Country
122	Crunchy	CRUNCH1				YAMAHA 2x12		Rock
123	Classic OD	CRUNCH2			DELAY HALL	British 4x12		Rock
131	Contemporary Jazz	CRUNCH2				Modern 1x12		Jazz
132	Match	CLEAN1		PHASER	DELAY	Modern 2x12		Rock/Blues/Country
133	Traditional Clean	CLEAN2			SPRING	American 2x12		Clean but a little crunchy
211	Ratty Rotor	LEAD1		ROTARY	DELAY	YAMAHA 2x12		Rotary Speaker Fast
212	Ratty Rotor slow	LEAD1		ROTARY	DELAY	YAMAHA 2x12		Rotary Speaker Slow
213	Pulse Wah	CLEAN2	COMP	TREMOLO	DELAY	YAMAHA 1x12	Wah	Experimental
221	Stairwah	LEAD1			TAPE ECHO SPRING	YAMAHA 1x12		70's Hard Rock
222	Just Enuff Grit	CRUNCH2	COMP	CHORUS		Hybrid 2x12		Country
223	ZZBlues	LEAD1			TAPE ECHO	YAMAHA 1x12		Blues Rock
231	Medicine	DRIVE1	COMP	CHORUS		YAMAHA 1x12		80's modulated rhythm
232	Brutal Metal	LEAD1				British 4x12		Heavy Metal
233	Cowboy Baritone	DRIVE2		TREMOLO		YAMAHA 1x12		Country
311	Texas Blue	DRIVE2	COMP		DELAY HALL	Modern 4x12		Blues
312	Dreamscape	CLEAN1	COMP	FLANGER	TAPE ECHO	Hybrid 4x12		Triphop style atmosphere
313	Elastic	CRUNCH2	COMP	PHASER	TAPE ECHO	Hybrid 2x12		Indie rock combo
321	Big Bottom	LEAD1	COMP	FLANGER	DELAY PLATE	YAMAHA 4x12		Massive Attack modern stack
322	One Two	CRUNCH2	COMP	CHORUS	DELAY SPRING	YAMAHA 1x12		Britpop clean rhythm
323	Big Wing	CLEAN2	COMP	PHASER	DELAY PLATE	British 4x12		Rock/Blues phased rhythm
331	Hot-rodged British Lead	LEAD2			DELAY	British 4x12		Hard Rock
332	Evans Gate	DRIVE1	COMP	FLANGER	DELAY	YAMAHA 1x12		80's British Rock
333	Flip Out	LEAD1	COMP		DELAY	YAMAHA 1x12		Progressive Rock
411	Panning Power	CRUNCH2	COMP	TREMOLO	DELAY PLATE	YAMAHA 1x12		Rock
412	Hardcore	LEAD2	COMP	CHORUS		YAMAHA 4x12		Metal
413	Muted Riffin'	CRUNCH2		PHASER	DELAY	Hybrid 2x12		Country
421	Semi-Rotary	CLEAN2	COMP	ROTARY	TAPE ECHO	American 2x12		Rock
422	Texas Metal	LEAD1	COMP		DELAY	American 4x12		Rock
423	Roots	CRUNCH1	COMP		DELAY	Hybrid 2x12		Country
431	Southern Man	DRIVE1	COMP		TAPE ECHO	YAMAHA 2x12		Rock/Blues
432	Brit Blue	LEAD2	COMP		DELAY HALL	2x10		Blues Rock
433	Spit n' shine	CLEAN1	COMP		TAPE ECHO	Hybrid 1x12		Country/Jazz
511	A Musement	DRIVE2		CHORUS	TAPE ECHO	YAMAHA 4x12		Scooped Brit stack
512	Rockabilly	CRUNCH2	COMP	PHASER	DELAY PLATE	YAMAHA 1x12		50's Rock'n' Roll
513	Another Brick	DRIVE1	COMP		TAPE ECHO PLATE	YAMAHA 1x12		Progressive Rock
521	Bendz	LEAD1	COMP	FLANGER	TAPE ECHO	British 4x12		90's British Rock
522	Atmos Fear	CLEAN2	COMP	CHORUS	TAPE ECHO PLATE	YAMAHA 2x12		Big clean combo with tape echo
523	Hot Potato	LEAD1	COMP		DELAY SPRING	Modern 4x12		'Hot' head and 4x12" cab
531	Dirty-Brit-Poper	CRUNCH1				British 2x12		Pop
532	Flying Pigs	DRIVE1	COMP	PHASER	TAPE ECHO	YAMAHA 1x12		slide-style lead
533	Spectacular	CRUNCH1	COMP		TAPE ECHO SPRING	YAMAHA 1x12		early 60's lead tone
611	Lawman	CRUNCH1		PHASER	TAPE ECHO HALL	British 4x12		Rock
612	Straight	CLEAN2	COMP	PHASER		YAMAHA 4x12		Rock/Blues
613	Rich Chorus	CLEAN1	COMP	CHORUS	DELAY	American 1x12		Any
621	Vibratone blues	CRUNCH1		CHORUS	TAPE ECHO	YAMAHA 1x12		Country/Blues
622	Hi-Gain	DRIVE2			TAPE ECHO	American 4x12		Rock
623	Nashville Echo	CLEAN2	COMP		TAPE ECHO	American 2x12		Country/Pop
631	NY Punk	DRIVE1	COMP		DELAY	British 4x12		Punk/Rock
632	Paint It	LEAD2		TREMOLO	TAPE ECHO	American 2x12		Rock
633	Rock Me	CLEAN2			TAPE ECHO	American 2x12		Rock
711	Topload	DRIVE2	COMP		TAPE ECHO PLATE	Hybrid 2x12		70's Rock Sound
712	Screamtrain	DRIVE2	COMP	TREMOLO	TAPE ECHO	YAMAHA 4x12		Modern tremolo'd Brit head
713	Seattle	CLEAN2	COMP	FLANGER		Modern 1x12		Grunge
721	Plexi Time	CRUNCH1	COMP	ROTARY		YAMAHA 2x12		Classic head rhythm
722	Bumblebee	CLEAN1	COMP		TAPE ECHO	YAMAHA 2x12		Clean timed delay
723	Close To The Edge	DRIVE1	COMP	CHORUS	DELAY	Hybrid 2x12		Progressive Rock
731	Tremarrlo	DRIVE1	COMP	TREMOLO	DELAY SPRING	YAMAHA 1x12		Tremolo'd rhythm
732	Heavy Lead	LEAD2			DELAY SPRING	British 4x12		Hard Rock
733	Funky Phase	CLEAN1	COMP	PHASER	SPRING	British 4x12		Funk
811	Classic Flanging	CLEAN2	COMP	FLANGER		YAMAHA 1x12		Classic Effects
812	Power Chord	DRIVE2	COMP	TREMOLO	DELAY	American 4x12		Metal
813	Southern Rock	DRIVE1	COMP	CHORUS	TAPE ECHO SPRING	Hybrid 2x12		Country
821	Blue Neck	CRUNCH1	COMP		TAPE ECHO	4x10		Blues
822	Clean Solo	CLEAN1	COMP	CHORUS	DELAY HALL	Hybrid 2x12		Country
823	Queen	LEAD2		PHASER	DELAY	YAMAHA 4x12		Rock
831	Room Fills	LEAD2	COMP		DELAY	2x10		Rock
832	Cool Dawg	CLEAN2	COMP			British 2x12		All
833	Floodin Delay	DRIVE1		PHASER	SPRING	British 2x12		Rock
911	Slow Peeler	LEAD1	COMP	FLANGER	DELAY HALL			Experimental
912	BUG-wah!!	CLEAN2		PHASER	DELAY PLATE	YAMAHA 1x12	Wah, Delay Level	Experimental
913	Scrapelt	LEAD1	COMP	TREMOLO	DELAY PLATE	YAMAHA 4x12	MOD speed	Experimental
921	Tajma Wah	CLEAN2	COMP	FLANGER	DELAY HALL	YAMAHA 1x12	Wah	Experimental
922	Arena Talk	LEAD2		PHASER	DELAY PLATE		MOD Depth	Experimental
923	Choro Wah	LEAD2		CHORUS	TAPE ECHO SPRING		Wah	Experimental
931	Sluggger	LEAD1		FLANGER	DELAY PLATE		MOD Speed, Delay Level	Experimental
932	Spooky Wah	CLEAN2		PHASER	DELAY SPRING		Wah	Experimental
933	Rhythm Box	DRIVE1	COMP	TREMOLO	DELAY PLATE	YAMAHA 4x12		Experimental

* ファクトリープリセット状態でのスピーカーシミュレーター設定：プリセットエリア = ON、ユーザーエリア = OFF

* The factory preset for the Speaker Simulator is as follows: Preset Area Patches = ON, User Area Patches = OFF

* Les pré-réglages usine du simulateur de haut-parleur sont comme suit : Patches de zone de pré-réglage = actifs, patches de zone utilisateur = inactifs

* Die werkseitigen Vorgabeinstellungen des Lautsprecher-Simulators sind wie folgt: Preset Area-Patches = EIN, User Area-Patches = AUS

* El preajuste inicial de fábrica para el simulador de altavoces es el siguiente: Parches del área de preajustes = ON, Parches del área del usuario = OFF.

* Le impostazioni predefinite per il simulatore di altoparlanti sono le seguenti: patch preselezionati = attivati, patch dell'utente = disattivati.

* De fabrieksinstelling voor de luidspreker-simulator is als volgt: Voorgeprogrammeerd gedelde patches = ON (aan), Gebruikersgedeelte patches = OFF (uit)